



# CATALOGUE 2026

21.12.2025

| O.E.M.code | TAURUS code | Description           |
|------------|-------------|-----------------------|
| 4301467012 | T-TF001     | Oil wetted air Filter |
| 4301867012 | T-TF002     | Oil wetted air Filter |
| 4301867022 | T-TF003     | Oil wetted air Filter |
| 4303667012 | T-TF004     | Oil wetted air Filter |
| 4304667012 | T-TF005     | Oil wetted air Filter |
| 4306067012 | T-TF006     | Oil wetted air Filter |
| 4308067102 | T-TF007     | Oil wetted air Filter |
| 4310067012 | T-TF008     | Oil wetted air Filter |
| 4313067012 | T-TF009     | Oil wetted air Filter |
| 4318067012 | T-TF010     | Oil wetted air Filter |
| 4324067012 | T-TF011     | Oil wetted air Filter |
| 4332067012 | T-TF012     | Oil wetted air Filter |
| 4500153116 | T-A8711960  | Air Filter            |
| 4500153126 | T-A879460   | Air Filter            |
| 4500253106 | T-A879960   | Air Filter            |
| 4500253116 | T-A879060   | Air Filter            |
| 4500253126 | T-A879860   | Air Filter            |
| 4500353106 | T-A8710560  | Air Filter            |
| 4500453106 | T-A8711160  | Air Filter            |
| 4500453114 | T-A8711560  | Air Filter            |
| 4500453134 | T-A876260   | Air Filter            |
| 4500455104 | T-A8710860  | Air Filter            |
| 4500553134 | T-A8710760  | Air Filter            |
| 4500653106 | T-A878960   | Air Filter            |
| 4500653124 | T-A8712660  | Air Filter            |
| 4500653134 | T-A8712760  | Air Filter            |
| 4500653144 | T-A8712160  | Air Filter            |
| 4500753114 | T-A8711360  | Air Filter            |
| 4500853134 | T-A8710060  | Air Filter            |
| 4500855124 | T-A8711060  | Air Filter            |
| 4500949191 | T-A8798260  | Air Filter            |
| 4500953105 | T-A879160   | Air Filter            |
| 4500953116 | T-A8765560  | Air Filter            |
| 4500953136 | T-A8712560  | Air Filter            |
| 4500953144 | T-A8711760  | Air Filter            |
| 4500955115 | T-A8711260  | Air Filter            |
| 4500972105 | T-FCV102    | Air Filter Housing    |
| 4500972204 | T-FCV102    | Air Filter Housing    |
| 4501053104 | T-A8710360  | Air Filter            |
| 4501152105 | T-A8712360  | Air Filter            |
| 4501153105 | T-A8712360  | Air Filter            |
| 4501155105 | T-A8713060  | Air Filter            |
| 4501252126 | T-A8713960  | Air Filter            |
| 4501255105 | T-A8710460  | Air Filter            |
| 4501353114 | T-A879360   | Air Filter            |
| 4501355126 | T-A8778260  | Air Filter            |
| 4501555124 | T-A8765860  | Air Filter            |
| 4501855104 | T-A8710260  | Air Filter            |
| 4502153104 | T-A8712060  | Air Filter            |
| 4502155104 | T-A8711860  | Air Filter            |



# CATALOGUE 2026

21.12.2025

|            |             |                    |
|------------|-------------|--------------------|
| 4502172105 | T-FCV105    | Air Filter Housing |
| 4502172125 | T-FCV118    | Air Filter Housing |
| 4502172204 | T-FCV105    | Air Filter Housing |
| 4502177125 | T-FB11      | Air Filter Housing |
| 4502755104 | T-A875160   | Air Filter         |
| 4503154144 | T-A8766360  | Air Filter         |
| 4503154154 | T-A8766360  | Air Filter         |
| 4503154164 | T-A8766360  | Air Filter         |
| 4503253106 | T-A879760   | Air Filter         |
| 4503255186 | T-A8765760  | Air Filter         |
| 4503277105 | T-FB12      | Air Filter Housing |
| 4503355135 | T-A8766260  | Air Filter         |
| 4503455105 | T-A8715560  | Air Filter         |
| 4503555106 | T-A871060   | Air Filter         |
| 4503753105 | T-A8712260  | Air Filter         |
| 4503772105 | T-FCV104    | Air Filter Housing |
| 4503772135 | T-FCV116    | Air Filter Housing |
| 4503854165 | T-A8715560  | Air Filter         |
| 4503854166 | T-A8715560  | Air Filter         |
| 4504049351 | T-A8784760  | Air Filter         |
| 4504355114 | T-A8716560  | Air Filter         |
| 4504953104 | T-A8710660  | Air Filter         |
| 4505255106 | T-A873160   | Air Filter         |
| 4505555216 | T-A8772160  | Air Filter         |
| 4505759104 | T-A875360   | Air Filter         |
| 4506055106 | T-A8778560  | Air Filter         |
| 4506854174 | T-A8762060  | Air Filter         |
| 4506854184 | T-A8762060  | Air Filter         |
| 4506854194 | T-A8762060  | Air Filter         |
| 4506855194 | T-A8762060  | Air Filter         |
| 4506955105 | T-A8765660  | Air Filter         |
| 4506955146 | T-A8765660  | Air Filter         |
| 4507155126 | T-A877060   | Air Filter         |
| 4507452215 | T-A8711660  | Air Filter         |
| 4507453105 | T-A8711660  | Air Filter         |
| 4507477115 | T-FB14      | Air Filter Housing |
| 4507554166 | T-A8766960  | Air Filter         |
| 4507555156 | T-A8766960  | Air Filter         |
| 4507659104 | T-A874960   | Air Filter         |
| 4508155106 | T-A8714760  | Air Filter         |
| 4508855124 | T-A873860   | Air Filter         |
| 4509054154 | T-A87102360 | Air Filter         |
| 4510054134 | T-A8769660  | Air Filter         |
| 4510054174 | T-A8769660  | Air Filter         |
| 4510055106 | T-A8715960  | Air Filter         |
| 4510055109 | T-A8770160  | Air Filter         |
| 4510055134 | T-A8769660  | Air Filter         |
| 4510055214 | T-A8769660  | Air Filter         |
| 4510056164 | T-A8768560  | Air Filter         |
| 4510057104 | T-A8768560  | Air Filter         |
| 4511454134 | T-A872760   | Air Filter         |



# CATALOGUE 2026

21.12.2025

|            |            |                    |
|------------|------------|--------------------|
| 4511455114 | T-A872760  | Air Filter         |
| 4511455149 | T-A8780560 | Air Filter         |
| 4511459104 | T-A875060  | Air Filter         |
| 4511554116 | T-A8767260 | Air Filter         |
| 4511555124 | T-A8771060 | Air Filter         |
| 4512055106 | T-A8783560 | Air Filter         |
| 4512453134 | T-A879660  | Air Filter         |
| 4512455114 | T-A878470  | Air Filter         |
| 4512472104 | T-FCV109   | Air Filter Housing |
| 4512472114 | T-FCV121   | Air Filter Housing |
| 4512472204 | T-FCV109   | Air Filter Housing |
| 4513455104 | T-A873260  | Air Filter         |
| 4513855105 | T-A879560  | Air Filter         |
| 4513872105 | T-FCV112   | Air Filter Housing |
| 4513877126 | T-FB15     | Air Filter Housing |
| 4514055166 | T-A8723060 | Air Filter         |
| 4514755126 | T-A874060  | Air Filter         |
| 4514955106 | T-A8715860 | Air Filter         |
| 4515355106 | T-A873060  | Air Filter         |
| 4516154104 | T-A871260  | Air Filter         |
| 4516555134 | T-A872860  | Air Filter         |
| 4516555149 | T-A8746660 | Air Filter         |
| 4517454154 | T-A8771860 | Air Filter         |
| 4517455154 | T-A8771860 | Air Filter         |
| 4517955104 | T-A872060  | Air Filter         |
| 4519055114 | T-A872160  | Air Filter         |
| 4519055164 | T-A8714960 | Air Filter         |
| 4520055109 | T-A8770260 | Air Filter         |
| 4520154204 | T-A873360  | Air Filter         |
| 4520154222 | T-A873360  | Air Filter         |
| 4520155104 | T-A873360  | Air Filter         |
| 4522055104 | T-A872960  | Air Filter         |
| 4522554134 | T-A87460   | Air Filter         |
| 4522554264 | T-A87460   | Air Filter         |
| 4522555114 | T-A87460   | Air Filter         |
| 4522555149 | T-A8745160 | Air Filter         |
| 4522559104 | T-A87260   | Air Filter         |
| 4522564104 | T-A87260   | Air Filter         |
| 4523055134 | T-A876460  | Air Filter         |
| 4524053111 | T-A877560  | Air Filter         |
| 4530055109 | T-A8770360 | Air Filter         |
| 4530057104 | T-A8767160 | Air Filter         |
| 4530255104 | T-A872260  | Air Filter         |
| 4530255119 | T-A872460  | Air Filter         |
| 4531755104 | T-A872360  | Air Filter         |
| 4532555104 | T-A87560   | Air Filter         |
| 4532555105 | T-A87560   | Air Filter         |
| 4532555149 | T-A874560  | Air Filter         |
| 4532555324 | T-A87360   | Air Filter         |
| 4532559104 | T-A87360   | Air Filter         |
| 4535253114 | T-A876760  | Air Filter         |



# CATALOGUE 2026

21.12.2025

|            |             |                   |
|------------|-------------|-------------------|
| 453555104  | T-A8710960  | Air Filter        |
| 4537553104 | T-A871960   | Air Filter        |
| 4540049151 | T-A8767060  | Air Filter        |
| 4540055109 | T-A8770460  | Air Filter        |
| 4540056154 | T-A8767060  | Air Filter        |
| 4540057104 | T-A8767060  | Air Filter        |
| 4541555104 | T-A8716460  | Air Filter        |
| 4543655119 | T-A8715160  | Air Filter        |
| 4544054104 | T-A873660   | Air Filter        |
| 4544054149 | T-A874460   | Air Filter        |
| 4544054174 | T-A873660   | Air Filter        |
| 4544055104 | T-A873660   | Air Filter        |
| 4544055149 | T-A874460   | Air Filter        |
| 4544059104 | T-A8713160  | Air Filter        |
| 4550055109 | T-A8770560  | Air Filter        |
| 4550056124 | T-A8766560  | Air Filter        |
| 4550057104 | T-A8766560  | Air Filter        |
| 4550057133 | T-A8766560  | Air Filter        |
| 4551655104 | T-A8714560  | Air Filter        |
| 4557755104 | T-A8715660  | Air Filter        |
| 4560049191 | T-A8775360  | Air Filter        |
| 4560057104 | T-A8775360  | Air Filter        |
| 4564053114 | T-A8738060  | Air Filter        |
| 4565054104 | T-A872560   | Air Filter        |
| 4565055104 | T-A872560   | Air Filter        |
| 4565055149 | T-A874360   | Air Filter        |
| 4565059104 | T-A872660   | Air Filter        |
| 4565092304 | T-A872560   | Air Filter        |
| 4571955104 | T-A8714860  | Air Filter        |
| 4577059104 | T-A8715760  | Air Filter        |
| 4584055104 | T-A873760   | Air Filter        |
| 4585054114 | T-A874260   | Air Filter        |
| 4585055114 | T-A874260   | Air Filter        |
| 4588055149 | T-A875560   | Air Filter        |
| 4591055114 | T-A873460   | Air Filter        |
| 4592055294 | T-A8716360  | Air Filter        |
| 4592055404 | T-A8713560  | Air Filter        |
| 4592055584 | T-A8716160  | Air Filter        |
| 4593054104 | T-A87128760 | Air Filter        |
| 4593054204 | T-A8786160  | Air Filter        |
| 4620056484 | T-A8768460  | Air Filter        |
| 4900049131 | T-FS18310   | Air-Oil Separator |
| 4900050011 | T-FS3020    | Air-Oil Separator |
| 4900050101 | T-FS2220    | Air-Oil Separator |
| 4900050102 | T-FS2220    | Air-Oil Separator |
| 4900050111 | T-FS1220    | Air-Oil Separator |
| 4900050121 | T-FS920     | Air-Oil Separator |
| 4900050131 | T-FS2020    | Air-Oil Separator |
| 4900050141 | T-FS830     | Air-Oil Separator |
| 4900050151 | T-FS930     | Air-Oil Separator |
| 4900050161 | T-FS965401  | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |               |                                 |
|------------|---------------|---------------------------------|
| 4900050171 | T-FS1820      | Air-Oil Separator               |
| 4900050181 | T-FS2920      | Air-Oil Separator               |
| 4900050182 | T-FS2920      | Air-Oil Separator               |
| 4900050191 | T-FS2720      | Air-Oil Separator               |
| 4900050201 | T-FS620       | Air-Oil Separator               |
| 4900050221 | T-FS3020      | Air-Oil Separator               |
| 4900050231 | T-FS2630      | Air-Oil Separator               |
| 4900050241 | T-FS30320     | Air-Oil Separator               |
| 4900050251 | T-FS12920     | Air-Oil Separator               |
| 4900050251 | T-FS5630      | Air-Oil Separator               |
| 4900050281 | T-FS920       | Air-Oil Separator               |
| 4900050291 | T-FS2230      | Air-Oil Separator               |
| 4900050301 | T-FS2130      | Air-Oil Separator               |
| 4900050311 | T-FS430       | Air-Oil Separator               |
| 4900050321 | T-FS2420      | Air-Oil Separator               |
| 4900050331 | T-FS2620      | Air-Oil Separator               |
| 4900050341 | T-FS10810     | Air-Oil Separator               |
| 4900050351 | T-FS10630     | Air-Oil Separator               |
| 4900050371 | T-FS720       | Air-Oil Separator               |
| 4900050391 | T-FS28010     | Air-Oil Separator               |
| 4900050411 | T-FS320       | Air-Oil Separator               |
| 4900050431 | T-FS910       | Air-Oil Separator               |
| 4900050441 | T-FS320       | Air-Oil Separator               |
| 4900050451 | T-FS18510     | Air-Oil Separator               |
| 4900050461 | T-FS965402    | Air-Oil Separator               |
| 4900050481 | T-FS5520      | Air-Oil Separator               |
| 4900050491 | T-FS420       | Air-Oil Separator               |
| 4900050501 | T-FS35520     | Air-Oil Separator               |
| 4900050511 | T-FS530       | Air-Oil Separator               |
| 4900050521 | T-FS196420    | Air-Oil Separator               |
| 4900050531 | T-FS220       | Air-Oil Separator               |
| 4900050541 | T-FS14720     | Air-Oil Separator               |
| 4900050571 | T-FS532509-HQ | Air-Oil Separator Iron end caps |
| 4900050581 | T-FS40920     | Air-Oil Separator               |
| 4900050591 | T-FS13120     | Air-Oil Separator               |
| 4900050601 | T-FS13710     | Air-Oil Separator               |
| 4900050611 | T-FS12010     | Air-Oil Separator               |
| 4900050612 | T-FS12010     | Air-Oil Separator               |
| 4900050641 | T-FS13120     | Air-Oil Separator               |
| 4900050651 | T-FS990220    | Air-Oil Separator               |
| 4900050681 | T-FS5620      | Air-Oil Separator               |
| 4900050692 | T-FS23710     | Air-Oil Separator               |
| 4900050711 | T-FS3120      | Air-Oil Separator               |
| 4900050717 | T-FS4920      | Air-Oil Separator               |
| 4900050721 | T-FS3430      | Air-Oil Separator               |
| 4900050741 | T-FS532300    | Air-Oil Separator               |
| 4900050751 | T-FS13410     | Air-Oil Separator               |
| 4900050761 | T-FS532303-HQ | Air-Oil Separator Iron end caps |
| 4900050771 | T-FS1320      | Air-Oil Separator               |
| 4900050772 | T-FS1320      | Air-Oil Separator               |
| 4900050773 | T-FS1320      | Air-Oil Separator               |



## CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4900050781 | T-FS3720   | Air-Oil Separator |
| 4900050801 | T-FS13120  | Air-Oil Separator |
| 4900050821 | T-FS4320   | Air-Oil Separator |
| 4900050831 | T-FS110    | Air-Oil Separator |
| 4900050841 | T-FS30710  | Air-Oil Separator |
| 4900050851 | T-FS1330   | Air-Oil Separator |
| 4900050861 | T-FS230    | Air-Oil Separator |
| 4900050891 | T-FS2020   | Air-Oil Separator |
| 4900051101 | T-FS2220   | Air-Oil Separator |
| 4900051111 | T-FS1220   | Air-Oil Separator |
| 4900051121 | T-FS194740 | Air-Oil Separator |
| 4900051121 | T-FS920    | Air-Oil Separator |
| 4900051131 | T-FS2020   | Air-Oil Separator |
| 4900051141 | T-FS830    | Air-Oil Separator |
| 4900051151 | T-FS930    | Air-Oil Separator |
| 4900051171 | T-FS1820   | Air-Oil Separator |
| 4900051173 | T-FS1730   | Air-Oil Separator |
| 4900051181 | T-FS2920   | Air-Oil Separator |
| 4900051189 | T-FS1330   | Air-Oil Separator |
| 4900051191 | T-FS2720   | Air-Oil Separator |
| 4900051201 | T-FS620    | Air-Oil Separator |
| 4900051206 | T-FS1320   | Air-Oil Separator |
| 4900051221 | T-FS3020   | Air-Oil Separator |
| 4900051231 | T-FS2630   | Air-Oil Separator |
| 4900051241 | T-FS30320  | Air-Oil Separator |
| 4900051248 | T-FS1630   | Air-Oil Separator |
| 4900051249 | T-FS1630   | Air-Oil Separator |
| 4900051251 | T-FS12920  | Air-Oil Separator |
| 4900051281 | T-FS920    | Air-Oil Separator |
| 4900051282 | T-FS6720   | Air-Oil Separator |
| 4900051291 | T-FS2230   | Air-Oil Separator |
| 4900051311 | T-FS430    | Air-Oil Separator |
| 4900051313 | T-FS5820   | Air-Oil Separator |
| 4900051321 | T-FS2420   | Air-Oil Separator |
| 4900051331 | T-FS2620   | Air-Oil Separator |
| 4900051341 | T-FS10810  | Air-Oil Separator |
| 4900051391 | T-FS28010  | Air-Oil Separator |
| 4900051411 | T-FS320    | Air-Oil Separator |
| 4900051441 | T-FS2320   | Air-Oil Separator |
| 4900051451 | T-FS18510  | Air-Oil Separator |
| 4900051461 | T-FS965402 | Air-Oil Separator |
| 4900051481 | T-FS5520   | Air-Oil Separator |
| 4900051491 | T-FS420    | Air-Oil Separator |
| 4900051506 | T-FS965404 | Air-Oil Separator |
| 4900051521 | T-FS196420 | Air-Oil Separator |
| 4900051531 | T-FS220    | Air-Oil Separator |
| 4900051541 | T-FS14720  | Air-Oil Separator |
| 4900051581 | T-FS40920  | Air-Oil Separator |
| 4900051601 | T-FS13710  | Air-Oil Separator |
| 4900051641 | T-FS14720  | Air-Oil Separator |
| 4900051651 | T-FS990220 | Air-Oil Separator |



## CATALOGUE 2026

21.12.2025

|            |               |                                   |
|------------|---------------|-----------------------------------|
| 4900051692 | T-FS23710     | Air-Oil Separator                 |
| 4900051711 | T-FS3120      | Air-Oil Separator                 |
| 4900051771 | T-FS1320      | Air-Oil Separator                 |
| 4900051773 | T-FS1320      | Air-Oil Separator                 |
| 4900051841 | T-FS30710     | Air-Oil Separator                 |
| 4900051851 | T-FS1330      | Air-Oil Separator                 |
| 4900051891 | T-FS23530     | Air-Oil Separator                 |
| 4900052100 | T-FS965401    | Air-Oil Separator                 |
| 4900052102 | T-FS965406    | Air-Oil Separator                 |
| 4900052103 | T-FS532302-HQ | Air-Oil Separator Iron end caps   |
| 4900052106 | T-FS22610     | Air-Oil Separator                 |
| 4900052107 | T-FS1510      | Air-Oil Separator                 |
| 4900052109 | T-FS518358    | Air-Oil Separator                 |
| 4900052109 | T-FS990202    | Air-Oil Separator Plastic Version |
| 4900052110 | T-FS6720      | Air-Oil Separator                 |
| 4900052111 | T-FS200910    | Air-Oil Separator                 |
| 4900052112 | T-FS120       | Air-Oil Separator                 |
| 4900052113 | T-FS120       | Air-Oil Separator                 |
| 4900052114 | T-FS965406    | Air-Oil Separator                 |
| 4900052121 | T-FS210       | Air-Oil Separator                 |
| 4900052132 | T-FS220       | Air-Oil Separator                 |
| 4900052141 | T-FS200910    | Air-Oil Separator                 |
| 4900052151 | T-FS532304-HQ | Air-Oil Separator Iron end caps   |
| 4900052152 | T-FS532303-HQ | Air-Oil Separator Iron end caps   |
| 4900052161 | T-FS730946    | Air-Oil Separator                 |
| 4900052162 | T-FS730936    | Air-Oil Separator                 |
| 4900052163 | T-FS730937    | Air-Oil Separator                 |
| 4900052171 | T-FS12410     | Air-Oil Separator                 |
| 4900052181 | T-FS532300    | Air-Oil Separator                 |
| 4900052191 | T-FS220       | Air-Oil Separator                 |
| 4900052201 | T-FS532302-HQ | Air-Oil Separator Iron end caps   |
| 4900052211 | T-FS210       | Air-Oil Separator                 |
| 4900052221 | T-FS7130      | Air-Oil Separator                 |
| 4900052231 | T-FS202410    | Air-Oil Separator                 |
| 4900052241 | T-FS13910     | Air-Oil Separator                 |
| 4900052271 | T-FS731023    | Air-Oil Separator                 |
| 4900052281 | T-FS201810    | Air-Oil Separator                 |
| 4900052341 | T-FS13920     | Air-Oil Separator                 |
| 4900052351 | T-FS730946    | Air-Oil Separator                 |
| 4900052352 | T-FS730936    | Air-Oil Separator                 |
| 4900052353 | T-FS730937    | Air-Oil Separator                 |
| 4900052361 | T-FS320       | Air-Oil Separator                 |
| 4900052381 | T-FS202410    | Air-Oil Separator                 |
| 4900052391 | T-FS965408    | Air-Oil Separator                 |
| 4900052401 | T-FS965407    | Air-Oil Separator                 |
| 4900052411 | T-FS200820    | Air-Oil Separator                 |
| 4900052501 | T-FS532216    | Air-Oil Separator                 |
| 4900052511 | T-FS1410      | Air-Oil Separator                 |
| 4900052581 | T-FS8310      | Air-Oil Separator                 |
| 4900052641 | T-FS28710     | Air-Oil Separator                 |
| 4900052651 | T-FS1310      | Air-Oil Separator                 |



# CATALOGUE 2026

21.12.2025

|            |               |                                   |
|------------|---------------|-----------------------------------|
| 4900053107 | T-FS4210      | Air-Oil Separator                 |
| 4900053111 | T-FS200910    | Air-Oil Separator                 |
| 4900053112 | T-FS120       | Air-Oil Separator                 |
| 4900053113 | T-FS120       | Air-Oil Separator                 |
| 4900053114 | T-FS965406    | Air-Oil Separator                 |
| 4900053115 | T-FS990199    | Air-Oil Separator Plastic Version |
| 4900053171 | T-FS12410     | Air-Oil Separator                 |
| 4900053181 | T-FS532300    | Air-Oil Separator                 |
| 4900053191 | T-FS6420      | Air-Oil Separator                 |
| 4900053211 | T-FS210       | Air-Oil Separator                 |
| 4900053241 | T-FS13910     | Air-Oil Separator                 |
| 4900053271 | T-FS731023    | Air-Oil Separator                 |
| 4900053341 | T-FS13920     | Air-Oil Separator                 |
| 4900053351 | T-FS730946    | Air-Oil Separator                 |
| 4900053352 | T-FS730936    | Air-Oil Separator                 |
| 4900053353 | T-FS730937    | Air-Oil Separator                 |
| 4900053354 | T-FS730937    | Air-Oil Separator                 |
| 4900053391 | T-FS965408    | Air-Oil Separator                 |
| 4900053401 | T-FS965407    | Air-Oil Separator                 |
| 4900053431 | T-FS18310     | Air-Oil Separator                 |
| 4900053501 | T-FS532216    | Air-Oil Separator                 |
| 4900053601 | T-FS1410      | Air-Oil Separator                 |
| 4900053611 | T-FS1510      | Air-Oil Separator                 |
| 4900053651 | T-FS1310      | Air-Oil Separator                 |
| 4900054111 | T-FS14710     | Air-Oil Separator                 |
| 4900054121 | T-FS14810     | Air-Oil Separator                 |
| 4900054131 | T-FS20610     | Air-Oil Separator                 |
| 4900054151 | T-FS965404    | Air-Oil Separator                 |
| 4900054161 | T-FS13620     | Air-Oil Separator                 |
| 4900054171 | T-FS13520     | Air-Oil Separator                 |
| 4900054181 | T-FS3720      | Air-Oil Separator                 |
| 4900054221 | T-FS532512-HQ | Air-Oil Separator Iron end caps   |
| 4900054241 | T-FS532510-HQ | Air-Oil Separator Iron end caps   |
| 4900054251 | T-FS965404    | Air-Oil Separator                 |
| 4900054261 | T-FS71064763  | Air-Oil Separator                 |
| 4900054281 | T-FS13620     | Air-Oil Separator                 |
| 4900054291 | T-FS24220     | Air-Oil Separator                 |
| 4900054301 | T-FS731401    | Air-Oil Separator                 |
| 4900054341 | T-FS532302-HQ | Air-Oil Separator Iron end caps   |
| 4900054351 | T-FS731400    | Air-Oil Separator                 |
| 4900054361 | T-FS731399    | Air-Oil Separator                 |
| 4900054381 | T-FS990149    | Air-Oil Separator                 |
| 4900054451 | T-FS7910      | Air-Oil Separator                 |
| 4900054501 | T-FS420       | Air-Oil Separator                 |
| 4900054621 | T-FS120       | Air-Oil Separator                 |
| 4900054631 | T-FS965414    | Air-Oil Separator                 |
| 4900054681 | T-FS965406    | Air-Oil Separator                 |
| 4900054691 | T-FS990199    | Air-Oil Separator Plastic Version |
| 4900054711 | T-FS32310     | Air-Oil Separator                 |
| 4900054741 | T-FS532510-HQ | Air-Oil Separator Iron end caps   |
| 4900055111 | T-FS14710     | Air-Oil Separator                 |

|            |               |                                   |
|------------|---------------|-----------------------------------|
| 4900055121 | T-FS14810     | Air-Oil Separator                 |
| 4900055131 | T-FS20610     | Air-Oil Separator                 |
| 4900055151 | T-FS965404    | Air-Oil Separator                 |
| 4900055161 | T-FS13620     | Air-Oil Separator                 |
| 4900055171 | T-FS13520     | Air-Oil Separator                 |
| 4900055181 | T-FS3720      | Air-Oil Separator                 |
| 4900055221 | T-FS532512-HQ | Air-Oil Separator Iron end caps   |
| 4900055231 | T-FS532509-HQ | Air-Oil Separator Iron end caps   |
| 4900055241 | T-FS532510-HQ | Air-Oil Separator Iron end caps   |
| 4900055251 | T-FS965413    | Air-Oil Separator                 |
| 4900055261 | T-FS71064763  | Air-Oil Separator                 |
| 4900055281 | T-FS13620     | Air-Oil Separator                 |
| 4900055291 | T-FS24220     | Air-Oil Separator                 |
| 4900055301 | T-FS731401    | Air-Oil Separator                 |
| 4900055321 | T-FS990105    | Air-Oil Separator                 |
| 4900055341 | T-FS532302-HQ | Air-Oil Separator Iron end caps   |
| 4900055351 | T-FS731400    | Air-Oil Separator                 |
| 4900055381 | T-FS990149    | Air-Oil Separator                 |
| 4900055451 | T-FS7910      | Air-Oil Separator                 |
| 4900055461 | T-FS8010      | Air-Oil Separator                 |
| 4900055471 | T-FS8210      | Air-Oil Separator                 |
| 4900055481 | T-FS8010      | Air-Oil Separator                 |
| 4900055491 | T-FS8110      | Air-Oil Separator                 |
| 4900055601 | T-FS21810     | Air-Oil Separator                 |
| 4900055621 | T-FS120       | Air-Oil Separator                 |
| 4900055631 | T-FS965414    | Air-Oil Separator                 |
| 4900055681 | T-FS965406    | Air-Oil Separator                 |
| 4900055691 | T-FS990199    | Air-Oil Separator Plastic Version |
| 4900055711 | T-FS32310     | Air-Oil Separator                 |
| 4900103113 | T-FS220       | Air-Oil Separator                 |
| 4900152100 | T-FS330       | Air-Oil Separator                 |
| 4900152101 | T-FS310       | Air-Oil Separator                 |
| 4900152103 | T-FS3420      | Air-Oil Separator                 |
| 4900152104 | T-FS6420      | Air-Oil Separator                 |
| 4900152105 | T-FS3130      | Air-Oil Separator                 |
| 4900152106 | T-FS130       | Air-Oil Separator                 |
| 4900152107 | T-FS420       | Air-Oil Separator                 |
| 4900152110 | T-FS18710     | Air-Oil Separator                 |
| 4900152111 | T-FS5820      | Air-Oil Separator                 |
| 4900152112 | T-FS8610      | Air-Oil Separator                 |
| 4900152113 | T-FS5730      | Air-Oil Separator                 |
| 4900152114 | T-FS3420      | Air-Oil Separator                 |
| 4900152121 | T-FS220       | Air-Oil Separator                 |
| 4900152131 | T-FS201040    | Air-Oil Separator                 |
| 4900152132 | T-FS220       | Air-Oil Separator                 |
| 4900152151 | T-FS532304-HQ | Air-Oil Separator Iron end caps   |
| 4900152152 | T-FS532303-HQ | Air-Oil Separator Iron end caps   |
| 4900152161 | T-FS5920      | Air-Oil Separator                 |
| 4900152162 | T-FS5920      | Air-Oil Separator                 |
| 4900152171 | T-FS532303-HQ | Air-Oil Separator Iron end caps   |
| 4900152172 | T-FS532304-HQ | Air-Oil Separator Iron end caps   |



## CATALOGUE 2026

21.12.2025

|            |               |                                 |
|------------|---------------|---------------------------------|
| 4900152181 | T-FS220       | Air-Oil Separator               |
| 4900152181 | T-FS220       | Air-Oil Separator               |
| 4900152211 | T-FS194740    | Air-Oil Separator               |
| 4900152221 | T-FS20230     | Air-Oil Separator               |
| 4900152241 | T-FS201040    | Air-Oil Separator               |
| 4900152271 | T-FS310       | Air-Oil Separator               |
| 4900152281 | T-FS5730      | Air-Oil Separator               |
| 4900152331 | T-FS420       | Air-Oil Separator               |
| 4900152371 | T-FS5730      | Air-Oil Separator               |
| 4900153105 | T-FS3130      | Air-Oil Separator               |
| 4900153106 | T-FS130       | Air-Oil Separator               |
| 4900153110 | T-FS18710     | Air-Oil Separator               |
| 4900153111 | T-FS5820      | Air-Oil Separator               |
| 4900153112 | T-FS8610      | Air-Oil Separator               |
| 4900153114 | T-FS3420      | Air-Oil Separator               |
| 4900153132 | T-FS220       | Air-Oil Separator               |
| 4900153151 | T-FS532304-HQ | Air-Oil Separator Iron end caps |
| 4900153152 | T-FS532303-HQ | Air-Oil Separator Iron end caps |
| 4900153161 | T-FS5920      | Air-Oil Separator               |
| 4900153171 | T-FS532303-HQ | Air-Oil Separator Iron end caps |
| 4900153172 | T-FS532304-HQ | Air-Oil Separator Iron end caps |
| 4900153181 | T-FS220       | Air-Oil Separator               |
| 4900153221 | T-FS3130      | Air-Oil Separator               |
| 4900153261 | T-FS130       | Air-Oil Separator               |
| 4900153271 | T-FS310       | Air-Oil Separator               |
| 4900153372 | T-FS5730      | Air-Oil Separator               |
| 4900154100 | T-FS965403    | Air-Oil Separator               |
| 4900154101 | T-FS4020      | Air-Oil Separator               |
| 4900154102 | T-FS4620      | Air-Oil Separator               |
| 4900154121 | T-FS965409    | Air-Oil Separator               |
| 4900154131 | T-FS965412    | Air-Oil Separator               |
| 4900154171 | T-FS532303-HQ | Air-Oil Separator Iron end caps |
| 4900154181 | T-FS532304-HQ | Air-Oil Separator Iron end caps |
| 4900154191 | T-FS532507-HQ | Air-Oil Separator Iron end caps |
| 4900154201 | T-FS532508-HQ | Air-Oil Separator Iron end caps |
| 4900154221 | T-FS5820      | Air-Oil Separator               |
| 4900154271 | T-FS4620      | Air-Oil Separator               |
| 4900154291 | T-FS965415    | Air-Oil Separator               |
| 4900154301 | T-FS965416    | Air-Oil Separator               |
| 4900154321 | T-FS990426    | Air-Oil Separator               |
| 4900154441 | T-FS5920      | Air-Oil Separator               |
| 4900154511 | T-FS220       | Air-Oil Separator               |
| 4900154521 | T-FS3130      | Air-Oil Separator               |
| 4900154541 | T-FS6420      | Air-Oil Separator               |
| 4900154561 | T-FS430       | Air-Oil Separator               |
| 4900154571 | T-FS965412    | Air-Oil Separator               |
| 4900154581 | T-FS965409    | Air-Oil Separator               |
| 4900154591 | T-FS965415    | Air-Oil Separator               |
| 4900154601 | T-FS965416    | Air-Oil Separator               |
| 4900155100 | T-FS965403    | Air-Oil Separator               |
| 4900155101 | T-FS4020      | Air-Oil Separator               |

|            |                               |                                 |
|------------|-------------------------------|---------------------------------|
| 4900155171 | <a href="#">T-FS532303-HQ</a> | Air-Oil Separator Iron end caps |
| 4900155181 | <a href="#">T-FS532304-HQ</a> | Air-Oil Separator Iron end caps |
| 4900155191 | <a href="#">T-FS532507-HQ</a> | Air-Oil Separator Iron end caps |
| 4900155201 | <a href="#">T-FS532508-HQ</a> | Air-Oil Separator Iron end caps |
| 4900155221 | <a href="#">T-FS5820</a>      | Air-Oil Separator               |
| 4900155251 | <a href="#">T-FS3720</a>      | Air-Oil Separator               |
| 4900155261 | <a href="#">T-FS3720</a>      | Air-Oil Separator               |
| 4900155271 | <a href="#">T-FS4620</a>      | Air-Oil Separator               |
| 4900155281 | <a href="#">T-FS71064773</a>  | Air-Oil Separator               |
| 4900155321 | <a href="#">T-FS990426</a>    | Air-Oil Separator               |
| 4900155441 | <a href="#">T-FS5920</a>      | Air-Oil Separator               |
| 4900155451 | <a href="#">T-FS3420</a>      | Air-Oil Separator               |
| 4900155461 | <a href="#">T-FS3130</a>      | Air-Oil Separator               |
| 4900155481 | <a href="#">T-FS201040</a>    | Air-Oil Separator               |
| 4900155501 | <a href="#">T-FS420</a>       | Air-Oil Separator               |
| 4900155511 | <a href="#">T-FS220</a>       | Air-Oil Separator               |
| 4900155521 | <a href="#">T-FS3130</a>      | Air-Oil Separator               |
| 4900155541 | <a href="#">T-FS6420</a>      | Air-Oil Separator               |
| 4900155561 | <a href="#">T-FS430</a>       | Air-Oil Separator               |
| 4900155571 | <a href="#">T-FS965412</a>    | Air-Oil Separator               |
| 4900155581 | <a href="#">T-FS965409</a>    | Air-Oil Separator               |
| 4900155591 | <a href="#">T-FS965415</a>    | Air-Oil Separator               |
| 4900155601 | <a href="#">T-FS965416</a>    | Air-Oil Separator               |
| 4900252100 | <a href="#">T-FS3520</a>      | Air-Oil Separator               |
| 4900252101 | <a href="#">T-FS3620</a>      | Air-Oil Separator               |
| 4900252109 | <a href="#">T-FS310</a>       | Air-Oil Separator               |
| 4900252111 | <a href="#">T-FS410</a>       | Air-Oil Separator               |
| 4900252112 | <a href="#">T-FS410</a>       | Air-Oil Separator               |
| 4900252113 | <a href="#">T-FS410</a>       | Air-Oil Separator               |
| 4900252121 | <a href="#">T-FS1630</a>      | Air-Oil Separator               |
| 4900252131 | <a href="#">T-FS1530</a>      | Air-Oil Separator               |
| 4900252151 | <a href="#">T-FS630</a>       | Air-Oil Separator               |
| 4900252161 | <a href="#">T-FS3320</a>      | Air-Oil Separator               |
| 4900252171 | <a href="#">T-FS13510</a>     | Air-Oil Separator               |
| 4900252181 | <a href="#">T-FS23830</a>     | Air-Oil Separator               |
| 4900252191 | <a href="#">T-FS19010</a>     | Air-Oil Separator               |
| 4900252192 | <a href="#">T-FS19010</a>     | Air-Oil Separator               |
| 4900252201 | <a href="#">T-FS1220</a>      | Air-Oil Separator               |
| 4900252211 | <a href="#">T-FS620</a>       | Air-Oil Separator               |
| 4900252221 | <a href="#">T-FS920</a>       | Air-Oil Separator               |
| 4900252231 | <a href="#">T-FS320</a>       | Air-Oil Separator               |
| 4900252241 | <a href="#">T-FS201140</a>    | Air-Oil Separator               |
| 4900252251 | <a href="#">T-FS4930</a>      | Air-Oil Separator               |
| 4900252261 | <a href="#">T-FS5030</a>      | Air-Oil Separator               |
| 4900252271 | <a href="#">T-FS3230</a>      | Air-Oil Separator               |
| 4900252291 | <a href="#">T-FS920</a>       | Air-Oil Separator               |
| 4900252292 | <a href="#">T-FS620</a>       | Air-Oil Separator               |
| 4900252301 | <a href="#">T-FS990221</a>    | Air-Oil Separator               |
| 4900252311 | <a href="#">T-FS3620</a>      | Air-Oil Separator               |
| 4900252341 | <a href="#">T-FS201140</a>    | Air-Oil Separator               |
| 4900252351 | <a href="#">T-FS14020</a>     | Air-Oil Separator               |



## CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4900252431 | T-FS920    | Air-Oil Separator |
| 4900252441 | T-FS620    | Air-Oil Separator |
| 4900252481 | T-FS630    | Air-Oil Separator |
| 4900252491 | T-FS16020  | Air-Oil Separator |
| 4900253101 | T-FS3620   | Air-Oil Separator |
| 4900253113 | T-FS410    | Air-Oil Separator |
| 4900253121 | T-FS1630   | Air-Oil Separator |
| 4900253131 | T-FS1530   | Air-Oil Separator |
| 4900253171 | T-FS13510  | Air-Oil Separator |
| 4900253192 | T-FS19010  | Air-Oil Separator |
| 4900253271 | T-FS990039 | Air-Oil Separator |
| 4900253281 | T-FS530    | Air-Oil Separator |
| 4900253301 | T-FS990221 | Air-Oil Separator |
| 4900253311 | T-FS3620   | Air-Oil Separator |
| 4900253321 | T-FS3520   | Air-Oil Separator |
| 4900253331 | T-FS1530   | Air-Oil Separator |
| 4900253351 | T-FS14020  | Air-Oil Separator |
| 4900253471 | T-FS3230   | Air-Oil Separator |
| 4900253481 | T-FS630    | Air-Oil Separator |
| 4900253491 | T-FS16020  | Air-Oil Separator |
| 4900253502 | T-FS5030   | Air-Oil Separator |
| 4900253512 | T-FS4930   | Air-Oil Separator |
| 4900254100 | T-FS3820   | Air-Oil Separator |
| 4900254111 | T-FS990215 | Air-Oil Separator |
| 4900254121 | T-FS4120   | Air-Oil Separator |
| 4900254161 | T-FS965410 | Air-Oil Separator |
| 4900254171 | T-FS3820   | Air-Oil Separator |
| 4900254331 | T-FS3620   | Air-Oil Separator |
| 4900254351 | T-FS920    | Air-Oil Separator |
| 4900254361 | T-FS16020  | Air-Oil Separator |
| 4900254371 | T-FS320    | Air-Oil Separator |
| 4900254381 | T-FS620    | Air-Oil Separator |
| 4900254391 | T-FS1320   | Air-Oil Separator |
| 4900254401 | T-FS2630   | Air-Oil Separator |
| 4900254421 | T-FS530    | Air-Oil Separator |
| 4900254431 | T-FS990221 | Air-Oil Separator |
| 4900254441 | T-FS14720  | Air-Oil Separator |
| 4900254451 | T-FS320    | Air-Oil Separator |
| 4900254471 | T-FS3620   | Air-Oil Separator |
| 4900254501 | T-FS4120   | Air-Oil Separator |
| 4900255100 | T-FS3820   | Air-Oil Separator |
| 4900255171 | T-FS3820   | Air-Oil Separator |
| 4900255211 | T-FS990219 | Air-Oil Separator |
| 4900255231 | T-FS920    | Air-Oil Separator |
| 4900255331 | T-FS3620   | Air-Oil Separator |
| 4900255341 | T-FS3520   | Air-Oil Separator |
| 4900255351 | T-FS920    | Air-Oil Separator |
| 4900255361 | T-FS16020  | Air-Oil Separator |
| 4900255371 | T-FS320    | Air-Oil Separator |
| 4900255381 | T-FS620    | Air-Oil Separator |
| 4900255391 | T-FS1320   | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4900255401 | T-FS2630   | Air-Oil Separator |
| 4900255411 | T-FS13920  | Air-Oil Separator |
| 4900255421 | T-FS530    | Air-Oil Separator |
| 4900255431 | T-FS990221 | Air-Oil Separator |
| 4900255441 | T-FS14720  | Air-Oil Separator |
| 4900255461 | T-FS630    | Air-Oil Separator |
| 4900255471 | T-FS3620   | Air-Oil Separator |
| 4900255491 | T-FS965410 | Air-Oil Separator |
| 4900255501 | T-FS4120   | Air-Oil Separator |
| 4900257101 | T-FS2110   | Air-Oil Separator |
| 4900352100 | T-FS1730   | Air-Oil Separator |
| 4900352101 | T-FS31220  | Air-Oil Separator |
| 4900352102 | T-FS110    | Air-Oil Separator |
| 4900352103 | T-FS110    | Air-Oil Separator |
| 4900352104 | T-FS4430   | Air-Oil Separator |
| 4900352121 | T-FS930    | Air-Oil Separator |
| 4900352122 | T-FS4320   | Air-Oil Separator |
| 4900352132 | T-FS2220   | Air-Oil Separator |
| 4900352141 | T-FS2730   | Air-Oil Separator |
| 4900352161 | T-FS1820   | Air-Oil Separator |
| 4900352171 | T-FS201240 | Air-Oil Separator |
| 4900352191 | T-FS4430   | Air-Oil Separator |
| 4900352201 | T-FS9920   | Air-Oil Separator |
| 4900352211 | T-FS9630   | Air-Oil Separator |
| 4900352221 | T-FS7130   | Air-Oil Separator |
| 4900352301 | T-FS1220   | Air-Oil Separator |
| 4900352331 | T-FS9630   | Air-Oil Separator |
| 4900353100 | T-FS4430   | Air-Oil Separator |
| 4900353103 | T-FS110    | Air-Oil Separator |
| 4900353121 | T-FS930    | Air-Oil Separator |
| 4900353122 | T-FS4320   | Air-Oil Separator |
| 4900353131 | T-FS9920   | Air-Oil Separator |
| 4900353132 | T-FS2220   | Air-Oil Separator |
| 4900353141 | T-FS2730   | Air-Oil Separator |
| 4900353151 | T-FS990266 | Air-Oil Separator |
| 4900353191 | T-FS4430   | Air-Oil Separator |
| 4900353221 | T-FS4430   | Air-Oil Separator |
| 4900353332 | T-FS9630   | Air-Oil Separator |
| 4900354101 | T-FS6020   | Air-Oil Separator |
| 4900354111 | T-FS965411 | Air-Oil Separator |
| 4900354141 | T-FS1720   | Air-Oil Separator |
| 4900354241 | T-FS2220   | Air-Oil Separator |
| 4900354251 | T-FS1220   | Air-Oil Separator |
| 4900354261 | T-FS1820   | Air-Oil Separator |
| 4900354281 | T-FS4320   | Air-Oil Separator |
| 4900354291 | T-FS4430   | Air-Oil Separator |
| 4900354301 | T-FS4430   | Air-Oil Separator |
| 4900354321 | T-FS9920   | Air-Oil Separator |
| 4900354331 | T-FS965411 | Air-Oil Separator |
| 4900355131 | T-FS1820   | Air-Oil Separator |
| 4900355141 | T-FS1720   | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4900355201 | T-FS1920   | Air-Oil Separator |
| 4900355241 | T-FS2220   | Air-Oil Separator |
| 4900355251 | T-FS1220   | Air-Oil Separator |
| 4900355261 | T-FS1820   | Air-Oil Separator |
| 4900355281 | T-FS4320   | Air-Oil Separator |
| 4900355291 | T-FS4430   | Air-Oil Separator |
| 4900355301 | T-FS4430   | Air-Oil Separator |
| 4900355321 | T-FS9920   | Air-Oil Separator |
| 4900355331 | T-FS965411 | Air-Oil Separator |
| 4900356101 | T-FS8410   | Air-Oil Separator |
| 4900357101 | T-FS8410   | Air-Oil Separator |
| 4900452101 | T-FS2420   | Air-Oil Separator |
| 4900452102 | T-FS2420   | Air-Oil Separator |
| 4900452121 | T-FS2020   | Air-Oil Separator |
| 4900452131 | T-FS2020   | Air-Oil Separator |
| 4900452141 | T-FS43120  | Air-Oil Separator |
| 4900452151 | T-FS990226 | Air-Oil Separator |
| 4900453101 | T-FS2420   | Air-Oil Separator |
| 4900453151 | T-FS990226 | Air-Oil Separator |
| 4900454171 | T-FS2420   | Air-Oil Separator |
| 4900454181 | T-FS2720   | Air-Oil Separator |
| 4900454191 | T-FS2620   | Air-Oil Separator |
| 4900454201 | T-FS2020   | Air-Oil Separator |
| 4900454221 | T-FS2420   | Air-Oil Separator |
| 4900454231 | T-FS2320   | Air-Oil Separator |
| 4900455121 | T-FS2420   | Air-Oil Separator |
| 4900455171 | T-FS2420   | Air-Oil Separator |
| 4900455181 | T-FS2720   | Air-Oil Separator |
| 4900455191 | T-FS2620   | Air-Oil Separator |
| 4900455201 | T-FS2020   | Air-Oil Separator |
| 4900455221 | T-FS2420   | Air-Oil Separator |
| 4900455231 | T-FS2320   | Air-Oil Separator |
| 4900502010 | T-FS620    | Air-Oil Separator |
| 4900552101 | T-FS16820  | Air-Oil Separator |
| 4900552141 | T-FS2720   | Air-Oil Separator |
| 4900552151 | T-FS2720   | Air-Oil Separator |
| 4900553101 | T-FS16820  | Air-Oil Separator |
| 4900553191 | T-FS2720   | Air-Oil Separator |
| 4900652100 | T-FS3020   | Air-Oil Separator |
| 4900652131 | T-FS3020   | Air-Oil Separator |
| 4900652141 | T-FS196420 | Air-Oil Separator |
| 4900652261 | T-FS20730  | Air-Oil Separator |
| 4900653100 | T-FS3020   | Air-Oil Separator |
| 4900653251 | T-FS15220  | Air-Oil Separator |
| 4900653261 | T-FS20730  | Air-Oil Separator |
| 4900654231 | T-FS2920   | Air-Oil Separator |
| 4900654241 | T-FS3020   | Air-Oil Separator |
| 4900654251 | T-FS3020   | Air-Oil Separator |
| 4900654261 | T-FS3020   | Air-Oil Separator |
| 4900655151 | T-FS990148 | Air-Oil Separator |
| 4900655171 | T-FS15220  | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4900655231 | T-FS2920   | Air-Oil Separator |
| 4900655241 | T-FS3020   | Air-Oil Separator |
| 4900655251 | T-FS3020   | Air-Oil Separator |
| 4900655261 | T-FS3020   | Air-Oil Separator |
| 4900655271 | T-FS196420 | Air-Oil Separator |
| 4900655281 | T-FS20730  | Air-Oil Separator |
| 4900752101 | T-FS5120   | Air-Oil Separator |
| 4900752103 | T-FS14820  | Air-Oil Separator |
| 4900752121 | T-FS5120   | Air-Oil Separator |
| 4900753102 | T-FS3120   | Air-Oil Separator |
| 4900753104 | T-FS14820  | Air-Oil Separator |
| 4900753121 | T-FS5120   | Air-Oil Separator |
| 4900754131 | T-FS3120   | Air-Oil Separator |
| 4900754141 | T-FS5120   | Air-Oil Separator |
| 4900754151 | T-FS14820  | Air-Oil Separator |
| 4900755131 | T-FS3120   | Air-Oil Separator |
| 4900755141 | T-FS5120   | Air-Oil Separator |
| 4900755151 | T-FS14820  | Air-Oil Separator |
| 4900852111 | T-FS45220  | Air-Oil Separator |
| 4900852121 | T-FS9120   | Air-Oil Separator |
| 4900853122 | T-FS9120   | Air-Oil Separator |
| 4900854111 | T-FS5520   | Air-Oil Separator |
| 4900855101 | T-FS9120   | Air-Oil Separator |
| 4900855111 | T-FS5520   | Air-Oil Separator |
| 4901352101 | T-FS5530   | Air-Oil Separator |
| 4901352111 | T-FS5530   | Air-Oil Separator |
| 4901353111 | T-FS5530   | Air-Oil Separator |
| 4901354111 | T-FS12920  | Air-Oil Separator |
| 4901354121 | T-FS5530   | Air-Oil Separator |
| 4901355111 | T-FS12920  | Air-Oil Separator |
| 4901355121 | T-FS5530   | Air-Oil Separator |
| 4901752101 | T-FS11630  | Air-Oil Separator |
| 4901754101 | T-FS11630  | Air-Oil Separator |
| 4920258101 | T-FS1050   | Air-Oil Separator |
| 4930052101 | T-FS5910   | Air-Oil Separator |
| 4930052102 | T-FS5910   | Air-Oil Separator |
| 4930052111 | T-FS9230   | Air-Oil Separator |
| 4930052131 | T-FS18210  | Air-Oil Separator |
| 4930052141 | T-FS9330   | Air-Oil Separator |
| 4930052151 | T-FS12210  | Air-Oil Separator |
| 4930052161 | T-FS2540   | Air-Oil Separator |
| 4930052171 | T-FS3340   | Air-Oil Separator |
| 4930052181 | T-FS24530  | Air-Oil Separator |
| 4930052191 | T-FS27010  | Air-Oil Separator |
| 4930052201 | T-FSP01240 | Air-Oil Separator |
| 4930052221 | T-FS9330   | Air-Oil Separator |
| 4930052231 | T-FS990033 | Air-Oil Separator |
| 4930052271 | T-FS990042 | Air-Oil Separator |
| 4930052281 | T-FS990033 | Air-Oil Separator |
| 4930052281 | T-FS990033 | Air-Oil Separator |
| 4930052291 | T-FS13310  | Air-Oil Separator |

|            |            |                   |
|------------|------------|-------------------|
| 4930052301 | T-FS367220 | Air-Oil Separator |
| 4930052321 | T-FS27430  | Air-Oil Separator |
| 4930052331 | T-FS28710  | Air-Oil Separator |
| 4930052361 | T-FS379300 | Air-Oil Separator |
| 4930053101 | T-FS5910   | Air-Oil Separator |
| 4930053131 | T-FS18210  | Air-Oil Separator |
| 4930053181 | T-FS24530  | Air-Oil Separator |
| 4930053222 | T-FS9330   | Air-Oil Separator |
| 4930053281 | T-FS990033 | Air-Oil Separator |
| 4930053291 | T-FS13310  | Air-Oil Separator |
| 4930053301 | T-FS367220 | Air-Oil Separator |
| 4930053321 | T-FS27430  | Air-Oil Separator |
| 4930053361 | T-FS379300 | Air-Oil Separator |
| 4930054141 | T-FS37320  | Air-Oil Separator |
| 4930054171 | T-FSP30520 | Air-Oil Separator |
| 4930054201 | T-FS27010  | Air-Oil Separator |
| 4930054231 | T-FS3930   | Air-Oil Separator |
| 4930054241 | T-FS24530  | Air-Oil Separator |
| 4930054291 | T-FS532216 | Air-Oil Separator |
| 4930054311 | T-FS990137 | Air-Oil Separator |
| 4930054361 | T-FS532216 | Air-Oil Separator |
| 4930055141 | T-FS37320  | Air-Oil Separator |
| 4930055171 | T-FSP30520 | Air-Oil Separator |
| 4930055211 | T-FS4610   | Air-Oil Separator |
| 4930055231 | T-FS3930   | Air-Oil Separator |
| 4930055241 | T-FS24530  | Air-Oil Separator |
| 4930055291 | T-FS532301 | Air-Oil Separator |
| 4930055301 | T-FS532301 | Air-Oil Separator |
| 4930055311 | T-FS731468 | Air-Oil Separator |
| 4930055331 | T-FS731630 | Air-Oil Separator |
| 4930152101 | T-FS18620  | Air-Oil Separator |
| 4930152102 | T-FS18620  | Air-Oil Separator |
| 4930152111 | T-FS12330  | Air-Oil Separator |
| 4930152111 | T-FS6730   | Air-Oil Separator |
| 4930152112 | T-FS3830   | Air-Oil Separator |
| 4930152121 | T-FS5720   | Air-Oil Separator |
| 4930152131 | T-FS7420   | Air-Oil Separator |
| 4930152141 | T-FS6630   | Air-Oil Separator |
| 4930152151 | T-FS10320  | Air-Oil Separator |
| 4930152181 | T-FS6530   | Air-Oil Separator |
| 4930152191 | T-FS11730  | Air-Oil Separator |
| 4930152201 | T-FS6630   | Air-Oil Separator |
| 4930152211 | T-FS7430   | Air-Oil Separator |
| 4930152221 | T-FS6830   | Air-Oil Separator |
| 4930152231 | T-FS6930   | Air-Oil Separator |
| 4930152241 | T-FS7730   | Air-Oil Separator |
| 4930152251 | T-FS203520 | Air-Oil Separator |
| 4930152261 | T-FS352520 | Air-Oil Separator |
| 4930152271 | T-FS201140 | Air-Oil Separator |
| 4930152301 | T-FS14210  | Air-Oil Separator |
| 4930152311 | T-FS13730  | Air-Oil Separator |



## CATALOGUE 2026

21.12.2025

|            |                            |                   |
|------------|----------------------------|-------------------|
| 4930152321 | <a href="#">T-FS18110</a>  | Air-Oil Separator |
| 4930152351 | <a href="#">T-FS990040</a> | Air-Oil Separator |
| 4930152361 | <a href="#">T-FSP06530</a> | Air-Oil Separator |
| 4930152391 | <a href="#">T-FS990041</a> | Air-Oil Separator |
| 4930152401 | <a href="#">T-FS5720</a>   | Air-Oil Separator |
| 4930152431 | <a href="#">T-FS990082</a> | Air-Oil Separator |
| 4930152441 | <a href="#">T-FSP08330</a> | Air-Oil Separator |
| 4930152451 | <a href="#">T-FS24430</a>  | Air-Oil Separator |
| 4930152481 | <a href="#">T-FS352520</a> | Air-Oil Separator |
| 4930152531 | <a href="#">T-FS6930</a>   | Air-Oil Separator |
| 4930152551 | <a href="#">T-FS48620</a>  | Air-Oil Separator |
| 4930152581 | <a href="#">T-FSP01640</a> | Air-Oil Separator |
| 4930152641 | <a href="#">T-FS21620</a>  | Air-Oil Separator |
| 4930152651 | <a href="#">T-FS990043</a> | Air-Oil Separator |
| 4930152671 | <a href="#">T-FS7420</a>   | Air-Oil Separator |
| 4930152681 | <a href="#">T-FS18110</a>  | Air-Oil Separator |
| 4930152691 | <a href="#">T-FS14210</a>  | Air-Oil Separator |
| 4930152711 | <a href="#">T-FS7830</a>   | Air-Oil Separator |
| 4930152721 | <a href="#">T-FS7830</a>   | Air-Oil Separator |
| 4930152731 | <a href="#">T-FS7630</a>   | Air-Oil Separator |
| 4930152761 | <a href="#">T-FS990017</a> | Air-Oil Separator |
| 4930152841 | <a href="#">T-FSP06530</a> | Air-Oil Separator |
| 4930152861 | <a href="#">T-FS990337</a> | Air-Oil Separator |
| 4930152891 | <a href="#">T-FS990157</a> | Air-Oil Separator |
| 4930152931 | <a href="#">T-FS990157</a> | Air-Oil Separator |
| 4930153101 | <a href="#">T-FS18620</a>  | Air-Oil Separator |
| 4930153102 | <a href="#">T-FS18620</a>  | Air-Oil Separator |
| 4930153131 | <a href="#">T-FS7420</a>   | Air-Oil Separator |
| 4930153141 | <a href="#">T-FS3830</a>   | Air-Oil Separator |
| 4930153151 | <a href="#">T-FS10320</a>  | Air-Oil Separator |
| 4930153341 | <a href="#">T-FSP09430</a> | Air-Oil Separator |
| 4930153401 | <a href="#">T-FS5720</a>   | Air-Oil Separator |
| 4930153532 | <a href="#">T-FS6930</a>   | Air-Oil Separator |
| 4930153542 | <a href="#">T-FS6830</a>   | Air-Oil Separator |
| 4930153701 | <a href="#">T-FS990038</a> | Air-Oil Separator |
| 4930153861 | <a href="#">T-FS990337</a> | Air-Oil Separator |
| 4930154101 | <a href="#">T-FS7220</a>   | Air-Oil Separator |
| 4930154111 | <a href="#">T-FS11520</a>  | Air-Oil Separator |
| 4930154121 | <a href="#">T-FS7220</a>   | Air-Oil Separator |
| 4930154131 | <a href="#">T-FS1740</a>   | Air-Oil Separator |
| 4930154151 | <a href="#">T-FS32620</a>  | Air-Oil Separator |
| 4930154181 | <a href="#">T-FS7220</a>   | Air-Oil Separator |
| 4930154191 | <a href="#">T-FS7220</a>   | Air-Oil Separator |
| 4930154201 | <a href="#">T-FS990130</a> | Air-Oil Separator |
| 4930154211 | <a href="#">T-FS45120</a>  | Air-Oil Separator |
| 4930154231 | <a href="#">T-FS34520</a>  | Air-Oil Separator |
| 4930154371 | <a href="#">T-FS44320</a>  | Air-Oil Separator |
| 4930154441 | <a href="#">T-FS990103</a> | Air-Oil Separator |
| 4930154451 | <a href="#">T-FS11710</a>  | Air-Oil Separator |
| 4930154521 | <a href="#">T-FS14210</a>  | Air-Oil Separator |
| 4930154531 | <a href="#">T-FS990043</a> | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4930154561 | T-FS7420   | Air-Oil Separator |
| 4930154571 | T-FS18620  | Air-Oil Separator |
| 4930154581 | T-FS5720   | Air-Oil Separator |
| 4930154601 | T-FS8520   | Air-Oil Separator |
| 4930154611 | T-FS3830   | Air-Oil Separator |
| 4930154621 | T-FS10320  | Air-Oil Separator |
| 4930154631 | T-FS3140   | Air-Oil Separator |
| 4930154641 | T-FS48620  | Air-Oil Separator |
| 4930154741 | T-FS11810  | Air-Oil Separator |
| 4930154761 | T-FS990215 | Air-Oil Separator |
| 4930155101 | T-FS7220   | Air-Oil Separator |
| 4930155111 | T-FS11520  | Air-Oil Separator |
| 4930155151 | T-FS32620  | Air-Oil Separator |
| 4930155181 | T-FS7220   | Air-Oil Separator |
| 4930155191 | T-FS7220   | Air-Oil Separator |
| 4930155201 | T-FS990130 | Air-Oil Separator |
| 4930155361 | T-FS40620  | Air-Oil Separator |
| 4930155371 | T-FS44320  | Air-Oil Separator |
| 4930155391 | T-FS22430  | Air-Oil Separator |
| 4930155421 | T-FS32920  | Air-Oil Separator |
| 4930155451 | T-FS11710  | Air-Oil Separator |
| 4930155481 | T-FS990103 | Air-Oil Separator |
| 4930155561 | T-FS7420   | Air-Oil Separator |
| 4930155571 | T-FS18620  | Air-Oil Separator |
| 4930155581 | T-FS5720   | Air-Oil Separator |
| 4930155601 | T-FS8520   | Air-Oil Separator |
| 4930155611 | T-FS6630   | Air-Oil Separator |
| 4930155621 | T-FS10320  | Air-Oil Separator |
| 4930155631 | T-FS3140   | Air-Oil Separator |
| 4930155641 | T-FS48620  | Air-Oil Separator |
| 4930155741 | T-FS11810  | Air-Oil Separator |
| 4930155761 | T-FS990215 | Air-Oil Separator |
| 4930155811 | T-FS11520  | Air-Oil Separator |
| 4930251631 | T-FS31820  | Air-Oil Separator |
| 4930252101 | T-FS4430   | Air-Oil Separator |
| 4930252102 | T-FS9820   | Air-Oil Separator |
| 4930252111 | T-FS49420  | Air-Oil Separator |
| 4930252121 | T-FS6220   | Air-Oil Separator |
| 4930252131 | T-FS13220  | Air-Oil Separator |
| 4930252132 | T-FS13220  | Air-Oil Separator |
| 4930252141 | T-FS16020  | Air-Oil Separator |
| 4930252151 | T-FS8720   | Air-Oil Separator |
| 4930252171 | T-FS7530   | Air-Oil Separator |
| 4930252211 | T-FS15620  | Air-Oil Separator |
| 4930252241 | T-FS201240 | Air-Oil Separator |
| 4930252251 | T-FS11030  | Air-Oil Separator |
| 4930252281 | T-FS19530  | Air-Oil Separator |
| 4930252291 | T-FS28210  | Air-Oil Separator |
| 4930252301 | T-FS8720   | Air-Oil Separator |
| 4930252311 | T-FS6220   | Air-Oil Separator |
| 4930252321 | T-FS15620  | Air-Oil Separator |



## CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4930252341 | T-FS20330  | Air-Oil Separator |
| 4930252351 | T-FS21930  | Air-Oil Separator |
| 4930252371 | T-FS19020  | Air-Oil Separator |
| 4930252391 | T-FS19020  | Air-Oil Separator |
| 4930252401 | T-FS12320  | Air-Oil Separator |
| 4930252411 | T-FS12820  | Air-Oil Separator |
| 4930252461 | T-FS990125 | Air-Oil Separator |
| 4930252471 | T-FS10420  | Air-Oil Separator |
| 4930252481 | T-FS19530  | Air-Oil Separator |
| 4930252491 | T-FS990076 | Air-Oil Separator |
| 4930252521 | T-FS26630  | Air-Oil Separator |
| 4930252531 | T-FSP01440 | Air-Oil Separator |
| 4930252541 | T-FS990096 | Air-Oil Separator |
| 4930252551 | T-FSP01740 | Air-Oil Separator |
| 4930252591 | T-FS10420  | Air-Oil Separator |
| 4930252601 | T-FS12820  | Air-Oil Separator |
| 4930252641 | T-FS18820  | Air-Oil Separator |
| 4930252681 | T-FS19010  | Air-Oil Separator |
| 4930252701 | T-FS990123 | Air-Oil Separator |
| 4930252771 | T-FS990124 | Air-Oil Separator |
| 4930252781 | T-FS990118 | Air-Oil Separator |
| 4930253131 | T-FS13220  | Air-Oil Separator |
| 4930253132 | T-FS13220  | Air-Oil Separator |
| 4930253171 | T-FS7530   | Air-Oil Separator |
| 4930253231 | T-FSP00230 | Air-Oil Separator |
| 4930253301 | T-FS8720   | Air-Oil Separator |
| 4930253311 | T-FS6220   | Air-Oil Separator |
| 4930253321 | T-FS15620  | Air-Oil Separator |
| 4930253391 | T-FS19020  | Air-Oil Separator |
| 4930253401 | T-FS12320  | Air-Oil Separator |
| 4930253451 | T-FS16120  | Air-Oil Separator |
| 4930253541 | T-FS990096 | Air-Oil Separator |
| 4930253591 | T-FS10420  | Air-Oil Separator |
| 4930253601 | T-FS12820  | Air-Oil Separator |
| 4930253611 | T-FS19530  | Air-Oil Separator |
| 4930253711 | T-FS12320  | Air-Oil Separator |
| 4930253721 | T-FS12320  | Air-Oil Separator |
| 4930254101 | T-FS8620   | Air-Oil Separator |
| 4930254102 | T-FS9820   | Air-Oil Separator |
| 4930254103 | T-FS20330  | Air-Oil Separator |
| 4930254131 | T-FS8620   | Air-Oil Separator |
| 4930254141 | T-FS29420  | Air-Oil Separator |
| 4930254151 | T-FS14420  | Air-Oil Separator |
| 4930254191 | T-FS29420  | Air-Oil Separator |
| 4930254211 | T-FS9820   | Air-Oil Separator |
| 4930254221 | T-FS7720   | Air-Oil Separator |
| 4930254271 | T-FS13220  | Air-Oil Separator |
| 4930254291 | T-FS29420  | Air-Oil Separator |
| 4930254381 | T-FS31820  | Air-Oil Separator |
| 4930254401 | T-FS18930  | Air-Oil Separator |
| 4930254411 | T-FS28210  | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4930254481 | T-FS38520  | Air-Oil Separator |
| 4930254491 | T-FSP28220 | Air-Oil Separator |
| 4930254671 | T-FS356830 | Air-Oil Separator |
| 4930254681 | T-FS14130  | Air-Oil Separator |
| 4930254692 | T-FS15230  | Air-Oil Separator |
| 4930254751 | T-FS28210  | Air-Oil Separator |
| 4930254761 | T-FS19020  | Air-Oil Separator |
| 4930254771 | T-FS10420  | Air-Oil Separator |
| 4930254781 | T-FS6220   | Air-Oil Separator |
| 4930254791 | T-FS12820  | Air-Oil Separator |
| 4930254801 | T-FS7530   | Air-Oil Separator |
| 4930254811 | T-FS8720   | Air-Oil Separator |
| 4930254831 | T-FS15620  | Air-Oil Separator |
| 4930254841 | T-FS12320  | Air-Oil Separator |
| 4930254851 | T-FS13120  | Air-Oil Separator |
| 4930254861 | T-FS6430   | Air-Oil Separator |
| 4930254871 | T-FS10230  | Air-Oil Separator |
| 4930254961 | T-FS990142 | Air-Oil Separator |
| 4930255101 | T-FS8620   | Air-Oil Separator |
| 4930255102 | T-FS9820   | Air-Oil Separator |
| 4930255103 | T-FS7720   | Air-Oil Separator |
| 4930255131 | T-FS8620   | Air-Oil Separator |
| 4930255151 | T-FS14420  | Air-Oil Separator |
| 4930255191 | T-FS29420  | Air-Oil Separator |
| 4930255211 | T-FS9820   | Air-Oil Separator |
| 4930255221 | T-FS7720   | Air-Oil Separator |
| 4930255271 | T-FS13220  | Air-Oil Separator |
| 4930255291 | T-FS29420  | Air-Oil Separator |
| 4930255361 | T-FS18820  | Air-Oil Separator |
| 4930255371 | T-FS10420  | Air-Oil Separator |
| 4930255381 | T-FS31820  | Air-Oil Separator |
| 4930255391 | T-FS19430  | Air-Oil Separator |
| 4930255401 | T-FS18930  | Air-Oil Separator |
| 4930255481 | T-FS38520  | Air-Oil Separator |
| 4930255491 | T-FSP28220 | Air-Oil Separator |
| 4930255511 | T-FS22330  | Air-Oil Separator |
| 4930255581 | T-FS29420  | Air-Oil Separator |
| 4930255601 | T-FS25220  | Air-Oil Separator |
| 4930255641 | T-FS15230  | Air-Oil Separator |
| 4930255671 | T-FS207920 | Air-Oil Separator |
| 4930255691 | T-FS15230  | Air-Oil Separator |
| 4930255701 | T-FS19430  | Air-Oil Separator |
| 4930255711 | T-FS18930  | Air-Oil Separator |
| 4930255731 | T-FS18820  | Air-Oil Separator |
| 4930255761 | T-FS19020  | Air-Oil Separator |
| 4930255771 | T-FS10420  | Air-Oil Separator |
| 4930255781 | T-FS6220   | Air-Oil Separator |
| 4930255791 | T-FS12820  | Air-Oil Separator |
| 4930255801 | T-FS7530   | Air-Oil Separator |
| 4930255811 | T-FS8720   | Air-Oil Separator |
| 4930255821 | T-FS28210  | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4930255831 | T-FS15620  | Air-Oil Separator |
| 4930255841 | T-FS12320  | Air-Oil Separator |
| 4930255851 | T-FS13120  | Air-Oil Separator |
| 4930255861 | T-FS6430   | Air-Oil Separator |
| 4930255871 | T-FS10230  | Air-Oil Separator |
| 4930255891 | T-FS990147 | Air-Oil Separator |
| 4930258101 | T-FS990006 | Air-Oil Separator |
| 4930258131 | T-FS990006 | Air-Oil Separator |
| 4930259101 | T-FS990006 | Air-Oil Separator |
| 4930259131 | T-FS990006 | Air-Oil Separator |
| 4930349101 | T-FS1050   | Air-Oil Separator |
| 4930352102 | T-FS8530   | Air-Oil Separator |
| 4930352103 | T-FS8530   | Air-Oil Separator |
| 4930352111 | T-FS13820  | Air-Oil Separator |
| 4930352121 | T-FS13420  | Air-Oil Separator |
| 4930352131 | T-FS13020  | Air-Oil Separator |
| 4930352141 | T-FS8230   | Air-Oil Separator |
| 4930352151 | T-FS12720  | Air-Oil Separator |
| 4930352161 | T-FS42420  | Air-Oil Separator |
| 4930352181 | T-FS18530  | Air-Oil Separator |
| 4930352191 | T-FS43920  | Air-Oil Separator |
| 4930352191 | T-FS43920  | Air-Oil Separator |
| 4930352211 | T-FS13020  | Air-Oil Separator |
| 4930352221 | T-FS26430  | Air-Oil Separator |
| 4930352241 | T-FS14620  | Air-Oil Separator |
| 4930352261 | T-FS12720  | Air-Oil Separator |
| 4930352271 | T-FSP13030 | Air-Oil Separator |
| 4930352371 | T-FS14620  | Air-Oil Separator |
| 4930352381 | T-FSP10930 | Air-Oil Separator |
| 4930352382 | T-FSP10930 | Air-Oil Separator |
| 4930352391 | T-FS13020  | Air-Oil Separator |
| 4930352401 | T-FS12720  | Air-Oil Separator |
| 4930353103 | T-FS8530   | Air-Oil Separator |
| 4930353111 | T-FS13820  | Air-Oil Separator |
| 4930353121 | T-FS13420  | Air-Oil Separator |
| 4930353122 | T-FS13420  | Air-Oil Separator |
| 4930353131 | T-FS13020  | Air-Oil Separator |
| 4930353181 | T-FS18530  | Air-Oil Separator |
| 4930353261 | T-FS12720  | Air-Oil Separator |
| 4930353271 | T-FSP13030 | Air-Oil Separator |
| 4930353281 | T-FS26530  | Air-Oil Separator |
| 4930353371 | T-FS990066 | Air-Oil Separator |
| 4930353381 | T-FSP10930 | Air-Oil Separator |
| 4930354121 | T-FS11820  | Air-Oil Separator |
| 4930354131 | T-FS18320  | Air-Oil Separator |
| 4930354141 | T-FS31220  | Air-Oil Separator |
| 4930354171 | T-FS31220  | Air-Oil Separator |
| 4930354181 | T-FS18320  | Air-Oil Separator |
| 4930354261 | T-FSP16510 | Air-Oil Separator |
| 4930354271 | T-FSP10930 | Air-Oil Separator |
| 4930354341 | T-FS19820  | Air-Oil Separator |



## CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4930354421 | T-FS356730 | Air-Oil Separator |
| 4930354451 | T-FS13820  | Air-Oil Separator |
| 4930354471 | T-FS990204 | Air-Oil Separator |
| 4930354481 | T-FSP16510 | Air-Oil Separator |
| 4930354491 | T-FS13420  | Air-Oil Separator |
| 4930354501 | T-FS42420  | Air-Oil Separator |
| 4930354511 | T-FS12720  | Air-Oil Separator |
| 4930354521 | T-FS14620  | Air-Oil Separator |
| 4930354531 | T-FS10820  | Air-Oil Separator |
| 4930354551 | T-FS13020  | Air-Oil Separator |
| 4930354581 | T-FS990301 | Air-Oil Separator |
| 4930354601 | T-FSP20520 | Air-Oil Separator |
| 4930354671 | T-FS990205 | Air-Oil Separator |
| 4930354681 | T-FS990204 | Air-Oil Separator |
| 4930355121 | T-FS11820  | Air-Oil Separator |
| 4930355131 | T-FS19820  | Air-Oil Separator |
| 4930355171 | T-FS31220  | Air-Oil Separator |
| 4930355181 | T-FS18320  | Air-Oil Separator |
| 4930355291 | T-FS13020  | Air-Oil Separator |
| 4930355351 | T-FS33620  | Air-Oil Separator |
| 4930355381 | T-FS7620   | Air-Oil Separator |
| 4930355391 | T-FS4820   | Air-Oil Separator |
| 4930355401 | T-FS24320  | Air-Oil Separator |
| 4930355451 | T-FS990078 | Air-Oil Separator |
| 4930355491 | T-FS13320  | Air-Oil Separator |
| 4930355501 | T-FS42420  | Air-Oil Separator |
| 4930355511 | T-FS12720  | Air-Oil Separator |
| 4930355521 | T-FS14620  | Air-Oil Separator |
| 4930355531 | T-FS10820  | Air-Oil Separator |
| 4930355551 | T-FS13020  | Air-Oil Separator |
| 4930355561 | T-FS16420  | Air-Oil Separator |
| 4930355601 | T-FSP20520 | Air-Oil Separator |
| 4930358101 | T-FS1050   | Air-Oil Separator |
| 4930358121 | T-FS1050   | Air-Oil Separator |
| 4930358131 | T-FS1050   | Air-Oil Separator |
| 4930358151 | T-FS1050   | Air-Oil Separator |
| 4930358471 | T-FS990003 | Air-Oil Separator |
| 4930359101 | T-FS1050   | Air-Oil Separator |
| 4930359121 | T-FS1050   | Air-Oil Separator |
| 4930359141 | T-FS1050   | Air-Oil Separator |
| 4930359161 | T-FS1050   | Air-Oil Separator |
| 4930362101 | T-FS1050   | Air-Oil Separator |
| 4930452101 | T-FS10220  | Air-Oil Separator |
| 4930452111 | T-FS10220  | Air-Oil Separator |
| 4930452121 | T-FS10930  | Air-Oil Separator |
| 4930452131 | T-FS8130   | Air-Oil Separator |
| 4930452141 | T-FS990078 | Air-Oil Separator |
| 4930452151 | T-FS49420  | Air-Oil Separator |
| 4930452171 | T-FS18630  | Air-Oil Separator |
| 4930452181 | T-FS12420  | Air-Oil Separator |
| 4930452191 | T-FS10220  | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4930452231 | T-FS990051 | Air-Oil Separator |
| 4930452261 | T-FS25630  | Air-Oil Separator |
| 4930452331 | T-FS20520  | Air-Oil Separator |
| 4930453101 | T-FS990027 | Air-Oil Separator |
| 4930453102 | T-FS10220  | Air-Oil Separator |
| 4930453121 | T-FS10930  | Air-Oil Separator |
| 4930453171 | T-FS18630  | Air-Oil Separator |
| 4930453181 | T-FS12420  | Air-Oil Separator |
| 4930453191 | T-FS10220  | Air-Oil Separator |
| 4930453211 | T-FSP00130 | Air-Oil Separator |
| 4930453261 | T-FS25630  | Air-Oil Separator |
| 4930453341 | T-FS990022 | Air-Oil Separator |
| 4930454101 | T-FS990027 | Air-Oil Separator |
| 4930454111 | T-FS10220  | Air-Oil Separator |
| 4930454131 | T-FS41320  | Air-Oil Separator |
| 4930454151 | T-FS10220  | Air-Oil Separator |
| 4930454241 | T-FS44020  | Air-Oil Separator |
| 4930454271 | T-FS12420  | Air-Oil Separator |
| 4930454361 | T-FS12420  | Air-Oil Separator |
| 4930454371 | T-FS10220  | Air-Oil Separator |
| 4930454381 | T-FS10720  | Air-Oil Separator |
| 4930454391 | T-FS990116 | Air-Oil Separator |
| 4930454401 | T-FS990117 | Air-Oil Separator |
| 4930455101 | T-FS990027 | Air-Oil Separator |
| 4930455131 | T-FS41320  | Air-Oil Separator |
| 4930455241 | T-FS44020  | Air-Oil Separator |
| 4930455261 | T-FS12420  | Air-Oil Separator |
| 4930455271 | T-FS12420  | Air-Oil Separator |
| 4930455281 | T-FS13830  | Air-Oil Separator |
| 4930455291 | T-FS11620  | Air-Oil Separator |
| 4930455361 | T-FS12420  | Air-Oil Separator |
| 4930455371 | T-FS10220  | Air-Oil Separator |
| 4930455381 | T-FS10720  | Air-Oil Separator |
| 4930455401 | T-FS990117 | Air-Oil Separator |
| 4930455491 | T-FS990116 | Air-Oil Separator |
| 4930552101 | T-FS9020   | Air-Oil Separator |
| 4930552111 | T-FS8920   | Air-Oil Separator |
| 4930552121 | T-FS5130   | Air-Oil Separator |
| 4930552131 | T-FS8920   | Air-Oil Separator |
| 4930552141 | T-FS10720  | Air-Oil Separator |
| 4930552151 | T-FS213220 | Air-Oil Separator |
| 4930552171 | T-FS18520  | Air-Oil Separator |
| 4930552201 | T-FS15720  | Air-Oil Separator |
| 4930552281 | T-FS990005 | Air-Oil Separator |
| 4930553101 | T-FS990080 | Air-Oil Separator |
| 4930553111 | T-FS8920   | Air-Oil Separator |
| 4930553121 | T-FS5130   | Air-Oil Separator |
| 4930553141 | T-FS9420   | Air-Oil Separator |
| 4930554101 | T-FS8820   | Air-Oil Separator |
| 4930554111 | T-FS2250   | Air-Oil Separator |
| 4930554121 | T-FS14120  | Air-Oil Separator |

|            |            |                   |
|------------|------------|-------------------|
| 4930554161 | T-FS8820   | Air-Oil Separator |
| 4930554171 | T-FS213220 | Air-Oil Separator |
| 4930554181 | T-FS990260 | Air-Oil Separator |
| 4930554201 | T-FSP31420 | Air-Oil Separator |
| 4930554241 | T-FS990080 | Air-Oil Separator |
| 4930554401 | T-FS8920   | Air-Oil Separator |
| 4930554441 | T-FS19920  | Air-Oil Separator |
| 4930555101 | T-FS8820   | Air-Oil Separator |
| 4930555121 | T-FS14120  | Air-Oil Separator |
| 4930555151 | T-FS35420  | Air-Oil Separator |
| 4930555161 | T-FS8820   | Air-Oil Separator |
| 4930555171 | T-FS213220 | Air-Oil Separator |
| 4930555181 | T-FS990260 | Air-Oil Separator |
| 4930555221 | T-FS35420  | Air-Oil Separator |
| 4930555401 | T-FS8920   | Air-Oil Separator |
| 4930555421 | T-FS9420   | Air-Oil Separator |
| 4930555441 | T-FS19920  | Air-Oil Separator |
| 4930558111 | T-FS2250   | Air-Oil Separator |
| 4930559121 | T-FS2250   | Air-Oil Separator |
| 4930651004 | T-FS550    | Air-Oil Separator |
| 4930652102 | T-FS16720  | Air-Oil Separator |
| 4930652111 | T-FS9420   | Air-Oil Separator |
| 4930652121 | T-FS18120  | Air-Oil Separator |
| 4930652141 | T-FS21830  | Air-Oil Separator |
| 4930652161 | T-FS9420   | Air-Oil Separator |
| 4930652171 | T-FSP11130 | Air-Oil Separator |
| 4930652181 | T-FSP21020 | Air-Oil Separator |
| 4930652201 | T-FS990061 | Air-Oil Separator |
| 4930653102 | T-FS16720  | Air-Oil Separator |
| 4930653141 | T-FS21830  | Air-Oil Separator |
| 4930653161 | T-FS9420   | Air-Oil Separator |
| 4930653171 | T-FSP11130 | Air-Oil Separator |
| 4930653181 | T-FSP21020 | Air-Oil Separator |
| 4930653191 | T-FS990023 | Air-Oil Separator |
| 4930654131 | T-FSP20620 | Air-Oil Separator |
| 4930654201 | T-FS16720  | Air-Oil Separator |
| 4930654281 | T-FS16720  | Air-Oil Separator |
| 4930654301 | T-FS990080 | Air-Oil Separator |
| 4930654311 | T-FS9020   | Air-Oil Separator |
| 4930654321 | T-FS18520  | Air-Oil Separator |
| 4930654331 | T-FSP21020 | Air-Oil Separator |
| 4930655131 | T-FSP20620 | Air-Oil Separator |
| 4930655141 | T-FS43520  | Air-Oil Separator |
| 4930655151 | T-FS8220   | Air-Oil Separator |
| 4930655281 | T-FS16720  | Air-Oil Separator |
| 4930655291 | T-FS18120  | Air-Oil Separator |
| 4930655301 | T-FS9020   | Air-Oil Separator |
| 4930655311 | T-FS9020   | Air-Oil Separator |
| 4930655321 | T-FS18520  | Air-Oil Separator |
| 4930655331 | T-FSP21020 | Air-Oil Separator |
| 4930655441 | T-FS43520  | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4930658101 | T-FS550    | Air-Oil Separator |
| 4930658131 | T-FS550    | Air-Oil Separator |
| 4930658151 | T-FS550    | Air-Oil Separator |
| 4930658171 | T-FS550    | Air-Oil Separator |
| 4930658181 | T-FS550    | Air-Oil Separator |
| 4930658199 | T-FS990179 | Air-Oil Separator |
| 4930658301 | T-FS550    | Air-Oil Separator |
| 4930658501 | T-FS550    | Air-Oil Separator |
| 4930659101 | T-FS550    | Air-Oil Separator |
| 4930659111 | T-FS550    | Air-Oil Separator |
| 4930659161 | T-FS550    | Air-Oil Separator |
| 4930659181 | T-FS550    | Air-Oil Separator |
| 4930659211 | T-FS550    | Air-Oil Separator |
| 4930659311 | T-FS550    | Air-Oil Separator |
| 4930659401 | T-FSP02550 | Air-Oil Separator |
| 4930659471 | T-FSP03350 | Air-Oil Separator |
| 4930662101 | T-FS550    | Air-Oil Separator |
| 4930752102 | T-FS9830   | Air-Oil Separator |
| 4930752111 | T-FS9930   | Air-Oil Separator |
| 4930752121 | T-FS353420 | Air-Oil Separator |
| 4930752131 | T-FS12620  | Air-Oil Separator |
| 4930752131 | T-FS12620  | Air-Oil Separator |
| 4930752141 | T-FS990024 | Air-Oil Separator |
| 4930753102 | T-FS9830   | Air-Oil Separator |
| 4930753111 | T-FS9930   | Air-Oil Separator |
| 4930753161 | T-FS990427 | Air-Oil Separator |
| 4930754111 | T-FS6120   | Air-Oil Separator |
| 4930754171 | T-FS11720  | Air-Oil Separator |
| 4930754191 | T-FS9830   | Air-Oil Separator |
| 4930755111 | T-FS6120   | Air-Oil Separator |
| 4930755191 | T-FS9830   | Air-Oil Separator |
| 4930758101 | T-FS1350   | Air-Oil Separator |
| 4930852121 | T-FS990457 | Air-Oil Separator |
| 4930858101 | T-FS650    | Air-Oil Separator |
| 4930858111 | T-FS650    | Air-Oil Separator |
| 4930858131 | T-FS650    | Air-Oil Separator |
| 4930858141 | T-FS650    | Air-Oil Separator |
| 4930858181 | T-FS650    | Air-Oil Separator |
| 4930858311 | T-FS650    | Air-Oil Separator |
| 4930859101 | T-FS650    | Air-Oil Separator |
| 4930859121 | T-FS650    | Air-Oil Separator |
| 4930859161 | T-FS650    | Air-Oil Separator |
| 4930859171 | T-FS650    | Air-Oil Separator |
| 4930859241 | T-FS990052 | Air-Oil Separator |
| 4930859311 | T-FS650    | Air-Oil Separator |
| 4930862101 | T-FS650    | Air-Oil Separator |
| 4930952101 | T-FS8430   | Air-Oil Separator |
| 4930953101 | T-FS8430   | Air-Oil Separator |
| 4930954101 | T-FS990196 | Air-Oil Separator |
| 4930954111 | T-FS8430   | Air-Oil Separator |
| 4930955101 | T-FS990196 | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |            |                   |
|------------|------------|-------------------|
| 4930955111 | T-FS8430   | Air-Oil Separator |
| 4931054121 | T-FS990282 | Air-Oil Separator |
| 4931154101 | T-FS990283 | Air-Oil Separator |
| 4931155101 | T-FS990283 | Air-Oil Separator |
| 4931258101 | T-FS950    | Air-Oil Separator |
| 4931258121 | T-FS950    | Air-Oil Separator |
| 4931258140 | T-FS3150   | Air-Oil Separator |
| 4931258351 | T-FS950    | Air-Oil Separator |
| 4931258361 | T-FS950    | Air-Oil Separator |
| 4931259101 | T-FS950    | Air-Oil Separator |
| 4931259110 | T-FS950    | Air-Oil Separator |
| 4931259131 | T-FS950    | Air-Oil Separator |
| 4931259391 | T-FS990136 | Air-Oil Separator |
| 4931262101 | T-FS950    | Air-Oil Separator |
| 4931658101 | T-FS350    | Air-Oil Separator |
| 4931658111 | T-FS450    | Air-Oil Separator |
| 4931658121 | T-FS450    | Air-Oil Separator |
| 4931658131 | T-FS450    | Air-Oil Separator |
| 4931658141 | T-FS450    | Air-Oil Separator |
| 4931658161 | T-FS450    | Air-Oil Separator |
| 4931658171 | T-FS450    | Air-Oil Separator |
| 4931658191 | T-FS450    | Air-Oil Separator |
| 4931658201 | T-FS450    | Air-Oil Separator |
| 4931658211 | T-FS450    | Air-Oil Separator |
| 4931658231 | T-FS450    | Air-Oil Separator |
| 4931658271 | T-FS450    | Air-Oil Separator |
| 4931658371 | T-FS450    | Air-Oil Separator |
| 4931658541 | T-FS450    | Air-Oil Separator |
| 4931658981 | T-FS990290 | Air-Oil Separator |
| 4931659131 | T-FS450    | Air-Oil Separator |
| 4931659171 | T-FS450    | Air-Oil Separator |
| 4931659211 | T-FS450    | Air-Oil Separator |
| 4931659521 | T-FSP03250 | Air-Oil Separator |
| 4931659551 | T-FS990034 | Air-Oil Separator |
| 4931662101 | T-FS450    | Air-Oil Separator |
| 4931662141 | T-FS450    | Air-Oil Separator |
| 4940152101 | T-FS3930   | Air-Oil Separator |
| 4940152103 | T-FS3930   | Air-Oil Separator |
| 4940153102 | T-FS3930   | Air-Oil Separator |
| 4940153103 | T-FS3930   | Air-Oil Separator |
| 4940252101 | T-FS5720   | Air-Oil Separator |
| 4940252111 | T-FS203520 | Air-Oil Separator |
| 4940252121 | T-FS10330  | Air-Oil Separator |
| 4940352121 | T-FS8520   | Air-Oil Separator |
| 4940353121 | T-FS8520   | Air-Oil Separator |
| 4940451007 | T-FS2810   | Air-Oil Separator |
| 4940452101 | T-FS2810   | Air-Oil Separator |
| 4940452111 | T-FS10320  | Air-Oil Separator |
| 4940453111 | T-FS10320  | Air-Oil Separator |
| 4940651001 | T-FS13220  | Air-Oil Separator |
| 4940651002 | T-FS13220  | Air-Oil Separator |

|            |            |                   |
|------------|------------|-------------------|
| 4940654101 | T-FS10520  | Air-Oil Separator |
| 4940654102 | T-FS6020   | Air-Oil Separator |
| 4940654103 | T-FS10520  | Air-Oil Separator |
| 4940655101 | T-FS16120  | Air-Oil Separator |
| 4940655111 | T-FS6020   | Air-Oil Separator |
| 4940852101 | T-FS13120  | Air-Oil Separator |
| 4940852102 | T-FS13120  | Air-Oil Separator |
| 4940852103 | T-FS13120  | Air-Oil Separator |
| 4940853101 | T-FS13120  | Air-Oil Separator |
| 4940853102 | T-FS13120  | Air-Oil Separator |
| 4940854101 | T-FS8320   | Air-Oil Separator |
| 4940854111 | T-FS10420  | Air-Oil Separator |
| 4940854141 | T-FS990127 | Air-Oil Separator |
| 4940855101 | T-FS8320   | Air-Oil Separator |
| 4940855121 | T-FS8320   | Air-Oil Separator |
| 4940855141 | T-FS990127 | Air-Oil Separator |
| 4940954111 | T-FS14620  | Air-Oil Separator |
| 4941252101 | T-FS13320  | Air-Oil Separator |
| 4941252111 | T-FS10820  | Air-Oil Separator |
| 4941252131 | T-FS13820  | Air-Oil Separator |
| 4941253101 | T-FS13320  | Air-Oil Separator |
| 4941253111 | T-FS10820  | Air-Oil Separator |
| 4941253131 | T-FS13820  | Air-Oil Separator |
| 4941254101 | T-FS10220  | Air-Oil Separator |
| 4941352101 | T-FS12420  | Air-Oil Separator |
| 4941450101 | T-FS10220  | Air-Oil Separator |
| 4941452101 | T-FS10220  | Air-Oil Separator |
| 4941452102 | T-FS10220  | Air-Oil Separator |
| 4941452111 | T-FS8420   | Air-Oil Separator |
| 4941453101 | T-FS990027 | Air-Oil Separator |
| 4941453111 | T-FS8420   | Air-Oil Separator |
| 4941552121 | T-FS10720  | Air-Oil Separator |
| 4941553121 | T-FS10720  | Air-Oil Separator |
| 4941654101 | T-FS8920   | Air-Oil Separator |
| 4941852101 | T-FS8920   | Air-Oil Separator |
| 4941852111 | T-FS9020   | Air-Oil Separator |
| 4941853101 | T-FS8920   | Air-Oil Separator |
| 4941853111 | T-FS9020   | Air-Oil Separator |
| 4941854111 | T-FS9020   | Air-Oil Separator |
| 4941855111 | T-FS9020   | Air-Oil Separator |
| 4942152101 | T-FS990261 | Air-Oil Separator |
| 4942152111 | T-FS990261 | Air-Oil Separator |
| 4942153111 | T-FS18520  | Air-Oil Separator |
| 4942552101 | T-FS9020   | Air-Oil Separator |
| 4942553101 | T-FS9020   | Air-Oil Separator |
| 4942555101 | T-FS9020   | Air-Oil Separator |
| 4960052101 | T-FS10010  | Air-Oil Separator |
| 4960153141 | T-FS10110  | Air-Oil Separator |
| 4960252141 | T-FS1030   | Air-Oil Separator |
| 4960252171 | T-FS15230  | Air-Oil Separator |
| 4960253151 | T-FS9710   | Air-Oil Separator |



# CATALOGUE 2026

21.12.2025

|            |              |                   |
|------------|--------------|-------------------|
| 4960254240 | T-M192       | In-Line Filter    |
| 4960352101 | T-FS1620     | Air-Oil Separator |
| 4960353111 | T-FS1920     | Air-Oil Separator |
| 6740057211 | T-FO32707380 | Oil Filter        |
| 6740057212 | T-FO3218580  | Oil Filter        |
| 6740258361 | T-FO531002   | Oil Filter        |
| 6740259356 | T-FO531002   | Oil Filter        |
| 6740259363 | T-FO531002   | Oil Filter        |
| 6740259486 | T-FO3222780  | Oil Filter        |
| 6740359046 | T-FO3215280  | Oil Filter        |
| 6740359266 | T-FO3211380  | Oil Filter        |
| 6740359576 | T-FO3215280  | Oil Filter        |
| 6750258123 | T-FO3215380  | Oil Filter        |
| 6750259133 | T-FO3216380  | Oil Filter        |
| 6750259135 | T-FO3217680  | Oil Filter        |
| 6750259140 | T-FO32109680 | Oil Filter        |
| 6750259376 | T-FO3215380  | Oil Filter        |
| 6750259866 | T-FO3215380  | Oil Filter        |
| 6750358010 | T-FO32102380 | Oil Filter        |
| 6750359096 | T-FO3211980  | Oil Filter        |
| 6750359114 | T-FO32346380 | Oil Filter        |
| 6750359556 | T-FO531001   | Oil Filter        |
| 6750455536 | T-FO32107280 | Oil Filter        |
| 6750459326 | T-FO3215480  | Oil Filter        |
| 6750558050 | T-FO3213080  | Oil Filter        |
| 6750558153 | T-FO3216280  | Oil Filter        |
| 6750558336 | T-FO531005   | Oil Filter        |
| 6750558426 | T-FO3210780  | Hydraulic Filter  |
| 6750558770 | T-FO32106380 | Oil Filter        |
| 6750558830 | T-FO3215080  | Oil Filter        |
| 6750559016 | T-FO531005   | Oil Filter        |
| 6750559176 | T-FO3214680  | Oil Filter        |
| 6750559236 | T-FO3210780  | Hydraulic Filter  |
| 6750559256 | T-FO3215580  | Oil Filter        |
| 6750658470 | T-FO3215080  | Oil Filter        |
| 6750658616 | T-FO3211080  | Oil Filter        |
| 6750659196 | T-FO3210780  | Hydraulic Filter  |
| 6750659206 | T-FO3211080  | Oil Filter        |
| 6750659208 | T-FO3211080  | Oil Filter        |
| 6750659636 | T-FO3211080  | Oil Filter        |
| 6755559166 | T-FO3215580  | Oil Filter        |
| 6760055212 | T-FO3221080  | Oil Filter        |
| 6760359271 | T-FS1650     | Air-Oil Separator |
| 6760758116 | T-FO3214980  | Oil Filter        |
| 6760759106 | T-FO3214980  | Oil Filter        |
| 6760759266 | T-FO3214980  | Oil Filter        |
| 6761258136 | T-FO3210880  | Oil Filter        |
| 6761258216 | T-FO3210880  | Oil Filter        |
| 6761258236 | T-FO3210880  | Oil Filter        |
| 6761259106 | T-FO3210880  | Oil Filter        |
| 6761259166 | T-FO3214880  | Oil Filter        |

|            |             |                   |
|------------|-------------|-------------------|
| 6761259176 | T-FO3210880 | Oil Filter        |
| 6761259216 | T-FO3210880 | Oil Filter        |
| 6761259566 | T-FO3210880 | Oil Filter        |
| 6770759107 | T-FO3217880 | Oil Filter        |
| 6770850101 | T-FS1750    | Air-Oil Separator |
| 6770851131 | T-FS1750    | Air-Oil Separator |
| 6770859311 | T-FS1550    | Air-Oil Separator |
| 6771650121 | T-FS2850    | Air-Oil Separator |
| 6771658621 | T-FO3210980 | Oil Filter        |
| 6771659116 | T-FO3210980 | Oil Filter        |
| 6771659272 | T-FO3210980 | Oil Filter        |
| 6771659616 | T-FO3210980 | Oil Filter        |
| 6771662216 | T-FO3210980 | Oil Filter        |
| 6780859101 | T-FO3218080 | Oil Filter        |
| 9450045003 | T-A8785360  | Air Filter        |
| 9450045004 | T-A8771260  | Air Filter        |
| 9450095008 | T-A8785260  | Air Filter        |
| 9490015026 | T-FS5730    | Air-Oil Separator |
| 9490015027 | T-FS965412  | Air-Oil Separator |
| 9493002021 | T-FS9330    | Air-Oil Separator |
| 9493005004 | T-FS7120    | Air-Oil Separator |
| 9493005009 | T-FS5910    | Air-Oil Separator |
| 9493005050 | T-FS37320   | Air-Oil Separator |
| 9493015021 | T-FS7420    | Air-Oil Separator |
| 9493015023 | T-FS10320   | Air-Oil Separator |
| 9493015031 | T-FS16020   | Air-Oil Separator |
| 9493015050 | T-FS6830    | Air-Oil Separator |
| 9493015407 | T-FS6930    | Air-Oil Separator |
| 9493025005 | T-FS13220   | Air-Oil Separator |
| 9493025008 | T-FS12820   | Air-Oil Separator |
| 9493025024 | T-FS8720    | Air-Oil Separator |
| 9493035003 | T-FS4920    | Air-Oil Separator |
| 9493035019 | T-FS4920    | Air-Oil Separator |
| 9493035021 | T-FS11820   | Air-Oil Separator |
| 9493045030 | T-FS18630   | Air-Oil Separator |
| 9493045102 | T-FS990116  | Air-Oil Separator |
| 9493055033 | T-FS18520   | Air-Oil Separator |
| 9494015003 | T-FS5910    | Air-Oil Separator |
| 9494025006 | T-FS13310   | Air-Oil Separator |
| 9494145004 | T-FS8420    | Air-Oil Separator |
| 9494185001 | T-FS9720    | Air-Oil Separator |
| 9494255001 | T-FS18520   | Air-Oil Separator |
| C10050     | T-A87118160 | Air Filter        |
| C1020      | T-A87878960 | Air Filter        |
| C1025      | T-A87101960 | Air Filter        |
| C1030      | T-A87878860 | Air Filter        |
| C1030/1    | T-A87878560 | Air Filter        |
| C1043/1    | T-A8716560  | Air Filter        |
| C1047      | T-A8713360  | Air Filter        |
| C1049      | T-A8710660  | Air Filter        |
| C11040     | T-A87125460 | Air Filter        |

|          |             |            |
|----------|-------------|------------|
| C11100   | T-A8768560  | Air Filter |
| C11103   | T-A8768260  | Air Filter |
| C1111/1  | T-A8789760  | Air Filter |
| C1112    | T-A8712060  | Air Filter |
| C1112/2  | T-A8711860  | Air Filter |
| C1112/8  | T-A87123560 | Air Filter |
| C11130   | T-A8797760  | Air Filter |
| C1126    | T-A8770760  | Air Filter |
| C1131    | T-A8766360  | Air Filter |
| C1131/1  | T-A8797260  | Air Filter |
| C1132    | T-A879760   | Air Filter |
| C1134    | T-A8715560  | Air Filter |
| C1140    | T-A8784760  | Air Filter |
| C1140/1  | T-A8775460  | Air Filter |
| C1145    | T-A878860   | Air Filter |
| C1157    | T-A8798460  | Air Filter |
| C1176    | T-A874960   | Air Filter |
| C1176/3  | T-A873960   | Air Filter |
| C1188    | T-A873860   | Air Filter |
| C1188x   | T-A873860   | Air Filter |
| C1196    | T-A871570   | Air Filter |
| C12004   | T-A87146860 | Air Filter |
| C12100   | T-A8715960  | Air Filter |
| C12114/1 | T-A8717560  | Air Filter |
| C1213    | T-A8778260  | Air Filter |
| C1247    | T-A87103760 | Air Filter |
| C1250    | T-A8793160  | Air Filter |
| C1281    | T-A8714760  | Air Filter |
| C13009   | T-A87146760 | Air Filter |
| C13114   | T-A875060   | Air Filter |
| C13114/4 | T-A872760   | Air Filter |
| C13131   | T-A8788360  | Air Filter |
| C13145   | T-A87131360 | Air Filter |
| C13145/2 | T-A87131360 | Air Filter |
| C1323    | T-A8786760  | Air Filter |
| C1337    | T-A8712260  | Air Filter |
| C1344    | T-A875760   | Air Filter |
| C1368    | T-A8762060  | Air Filter |
| C1369    | T-A8765660  | Air Filter |
| C1371    | T-A8722660  | Air Filter |
| C1381    | T-A8765160  | Air Filter |
| C14137   | T-A8793060  | Air Filter |
| C1415    | T-A8765860  | Air Filter |
| C14179   | T-A872060   | Air Filter |
| C14179/1 | T-A8718960  | Air Filter |
| C14190   | T-A8714960  | Air Filter |
| C14200   | T-A8768460  | Air Filter |
| C14200/1 | T-A8771660  | Air Filter |
| C14202/1 | T-A8794860  | Air Filter |
| C1426    | T-A8765360  | Air Filter |
| C1427    | T-A8714260  | Air Filter |

|          |             |            |
|----------|-------------|------------|
| C1440    | T-A8784360  | Air Filter |
| C1449    | T-A87110760 | Air Filter |
| C1450    | T-A873160   | Air Filter |
| C149     | T-A87110560 | Air Filter |
| C15120   | T-A8783560  | Air Filter |
| C15124/1 | T-A879660   | Air Filter |
| C15124/2 | T-A8790460  | Air Filter |
| C15124/4 | T-A8790460  | Air Filter |
| C15124/5 | T-A87SP9660 | Air Filter |
| C15165/3 | T-A872860   | Air Filter |
| C15248   | T-A875470   | Air Filter |
| C15300   | T-A8767160  | Air Filter |
| C1540    | T-A8798960  | Air Filter |
| C1540/3  | T-A8798960  | Air Filter |
| C1555/6  | T-A87135260 | Air Filter |
| C1567/1  | T-A873770   | Air Filter |
| C1574    | T-A8711660  | Air Filter |
| C1582    | T-A87878760 | Air Filter |
| C16100   | T-A87147260 | Air Filter |
| C16140   | T-A8723060  | Air Filter |
| C16153   | T-A873060   | Air Filter |
| C16162/1 | T-A87102460 | Air Filter |
| C16190   | T-A872160   | Air Filter |
| C16190/4 | T-A87146560 | Air Filter |
| C16190x  | T-A87146560 | Air Filter |
| C16302   | T-A872260   | Air Filter |
| C1632    | T-A8765760  | Air Filter |
| C1633/1  | T-A8766260  | Air Filter |
| C16335   | T-A8715460  | Air Filter |
| C16340   | T-A87119460 | Air Filter |
| C16400   | T-A8767060  | Air Filter |
| C1642    | T-A876960   | Air Filter |
| C1650    | T-A872770   | Air Filter |
| C1690    | T-A87102360 | Air Filter |
| C17100   | T-A8769660  | Air Filter |
| C17134   | T-A873260   | Air Filter |
| C17149   | T-A8715860  | Air Filter |
| C17160   | T-A873260   | Air Filter |
| C17161   | T-A875070   | Air Filter |
| C17190   | T-A87102060 | Air Filter |
| C17192   | T-A871770   | Air Filter |
| C17201   | T-A873360   | Air Filter |
| C17201/2 | T-A87111460 | Air Filter |
| C17217   | T-A871670   | Air Filter |
| C17225   | T-A87260    | Air Filter |
| C17225/3 | T-A87460    | Air Filter |
| C17250   | T-A8718260  | Air Filter |
| C17337   | T-A8766660  | Air Filter |
| C17400   | T-A8767660  | Air Filter |
| C1760/1  | T-A87144560 | Air Filter |
| C18001   | T-A8766060  | Air Filter |



## CATALOGUE 2026

21.12.2025

|          |             |            |
|----------|-------------|------------|
| C18120   | T-A8784660  | Air Filter |
| C18133   | T-A8783660  | Air Filter |
| C18152   | T-A8791260  | Air Filter |
| C1826    | T-A872870   | Air Filter |
| C1833    | T-A87101260 | Air Filter |
| C18436   | T-A877660   | Air Filter |
| C1870    | T-A8777860  | Air Filter |
| C19105   | T-A872070   | Air Filter |
| C19157   | T-A874060   | Air Filter |
| C19457   | T-A8768660  | Air Filter |
| C19460/2 | T-A87135960 | Air Filter |
| C1953    | T-A8714160  | Air Filter |
| C1989/1  | T-A8768060  | Air Filter |
| C20006   | T-A876360   | Air Filter |
| C20161   | T-A871260   | Air Filter |
| C20180   | T-A87878660 | Air Filter |
| C20189   | T-A8775160  | Air Filter |
| C2027    | T-A8798660  | Air Filter |
| C20325   | T-A87360    | Air Filter |
| C20325/2 | T-A87560    | Air Filter |
| C20500   | T-A8766560  | Air Filter |
| C21138/1 | T-A879560   | Air Filter |
| C21207/1 | T-A8737460  | Air Filter |
| C21317   | T-A872360   | Air Filter |
| C2135    | T-A871060   | Air Filter |
| C2135/2  | T-A871060   | Air Filter |
| C21415   | T-A8716460  | Air Filter |
| C21431   | T-A8715260  | Air Filter |
| C2146    | T-A87105760 | Air Filter |
| C21630/1 | T-A872470   | Air Filter |
| C2178    | T-A87760    | Air Filter |
| C22115   | T-A8771060  | Air Filter |
| C22450   | T-A8788160  | Air Filter |
| C22625   | T-A87125360 | Air Filter |
| C2263    | T-A878560   | Air Filter |
| C2263/1  | T-A8771760  | Air Filter |
| C2263/3  | T-A87232260 | Air Filter |
| C23115   | T-A8767260  | Air Filter |
| C23174   | T-A8771860  | Air Filter |
| C23185   | T-A8767360  | Air Filter |
| C23326   | T-A8722560  | Air Filter |
| C23440   | T-A8713160  | Air Filter |
| C23440/1 | T-A873660   | Air Filter |
| C23440/2 | T-A876570   | Air Filter |
| C23440/3 | T-A873660   | Air Filter |
| C23513   | T-A878970   | Air Filter |
| C23513/1 | T-A878970   | Air Filter |
| C2360    | T-A875460   | Air Filter |
| C23610   | T-A8775360  | Air Filter |
| C23610/3 | T-A8775360  | Air Filter |
| C23632/1 | T-A8710870  | Air Filter |

|           |             |                   |
|-----------|-------------|-------------------|
| C2375     | T-A8766960  | Air Filter        |
| C23750    | T-A87125260 | Air Filter        |
| C23800    | T-A87144860 | Air Filter        |
| C24355    | T-A878660   | Air Filter        |
| C24355/1  | T-A8710960  | Air Filter        |
| C24444/1  | T-A8722560  | Air Filter        |
| C24508    | T-A8744960  | Air Filter        |
| C24516    | T-A8714560  | Air Filter        |
| C24553    | T-A87125960 | Air Filter        |
| C2460     | T-A8778560  | Air Filter        |
| C24650    | T-A872660   | Air Filter        |
| C24650/1  | T-A872560   | Air Filter        |
| C24650/7  | T-A872660   | Air Filter        |
| C24719    | T-A8714860  | Air Filter        |
| C24719/1  | T-A8797860  | Air Filter        |
| C24725    | T-A8790960  | Air Filter        |
| C24745/1  | T-A873570   | Air Filter        |
| C24820    | T-A87120260 | Air Filter        |
| C25124    | T-A878470   | Air Filter        |
| C25312    | T-A87879060 | Air Filter        |
| C255037   | T-FSP03250  | Air-Oil Separator |
| C2555/2   | T-A8772160  | Air Filter        |
| C25710    | T-A8786660  | Air Filter        |
| C25710/3  | T-A87119860 | Air Filter        |
| C25740    | T-A8798060  | Air Filter        |
| C25860    | T-A8785160  | Air Filter        |
| C25860/1  | T-A8798160  | Air Filter        |
| C25860/2  | T-A8798160  | Air Filter        |
| C25860/5  | T-A87125860 | Air Filter        |
| C25860/6  | T-A87125860 | Air Filter        |
| C25990    | T-A87131660 | Air Filter        |
| C261100   | T-A87125060 | Air Filter        |
| C26176    | T-A8785760  | Air Filter        |
| C26240    | T-A877560   | Air Filter        |
| C26270    | T-A87124860 | Air Filter        |
| C2651     | T-A8758060  | Air Filter        |
| C26728    | T-A8792960  | Air Filter        |
| C271020   | T-A87117060 | Air Filter        |
| C271050   | T-A87114360 | Air Filter        |
| C271050/5 | T-A87114360 | Air Filter        |
| C271170   | T-A878770   | Air Filter        |
| C271320   | T-A87121960 | Air Filter        |
| C271320/3 | T-A87121960 | Air Filter        |
| C271397   | T-A8716160  | Air Filter        |
| C27230    | T-A876460   | Air Filter        |
| C27321    | T-A876660   | Air Filter        |
| C27585    | T-A8716060  | Air Filter        |
| C27585/3  | T-A8716060  | Air Filter        |
| C281275   | T-A87148060 | Air Filter        |
| C281275/1 | T-A87111260 | Air Filter        |
| C281440   | T-A87121560 | Air Filter        |

|           |             |            |
|-----------|-------------|------------|
| C2852     | T-A8771460  | Air Filter |
| C291410   | T-A8797160  | Air Filter |
| C29352/1  | T-A876760   | Air Filter |
| C29577    | T-A8715660  | Air Filter |
| C29624/1  | T-A8722960  | Air Filter |
| C29939    | T-A873460   | Air Filter |
| C30010    | T-A87414360 | Air Filter |
| C301530   | T-A87126460 | Air Filter |
| C301730   | T-A87101860 | Air Filter |
| C30186    | T-A87414360 | Air Filter |
| C30375    | T-A871960   | Air Filter |
| C30703    | T-A8739260  | Air Filter |
| C30810    | T-A8786560  | Air Filter |
| C30810/3  | T-A87114660 | Air Filter |
| C30850/2  | T-A874260   | Air Filter |
| C30850/6  | T-A874260   | Air Filter |
| C30877    | T-A8791160  | Air Filter |
| C30880    | T-A87215660 | Air Filter |
| C31       | T-A8711960  | Air Filter |
| C31/1     | T-A879460   | Air Filter |
| C31/4     | T-A8783860  | Air Filter |
| C31/5     | T-A8783260  | Air Filter |
| C311043   | T-A8781860  | Air Filter |
| C311093/2 | T-A8744660  | Air Filter |
| C311226   | T-A8716360  | Air Filter |
| C311256/1 | T-A87136460 | Air Filter |
| C311435   | T-A876470   | Air Filter |
| C31220    | T-A872960   | Air Filter |
| C3171/1   | T-A877060   | Air Filter |
| C31770    | T-A8715760  | Air Filter |
| C32       | T-A879860   | Air Filter |
| C32/2     | T-A8779060  | Air Filter |
| C32/3     | T-A87234860 | Air Filter |
| C32/4     | T-A87232960 | Air Filter |
| C321447   | T-A873070   | Air Filter |
| C321700/2 | T-A8772260  | Air Filter |
| C32640/1  | T-A8738060  | Air Filter |
| C33       | T-A8784060  | Air Filter |
| C33/1     | T-A8781560  | Air Filter |
| C33009    | T-A87413960 | Air Filter |
| C332200   | T-A87129060 | Air Filter |
| C33920/3  | T-A8713560  | Air Filter |
| C35       | T-A8711460  | Air Filter |
| C35111    | T-A871360   | Air Filter |
| C3576     | T-A8757760  | Air Filter |
| C361425   | T-A8794660  | Air Filter |
| C361552   | T-A87870    | Air Filter |
| C362080   | T-A8792860  | Air Filter |
| C36840/1  | T-A873760   | Air Filter |
| C36840/3  | T-A873760   | Air Filter |
| C37       | T-A8711360  | Air Filter |

|         |             |            |
|---------|-------------|------------|
| C38014  | T-A873270   | Air Filter |
| C381238 | T-A8787660  | Air Filter |
| C38550  | T-A8787060  | Air Filter |
| C402070 | T-A8786160  | Air Filter |
| C411    | T-A8712160  | Air Filter |
| C42/1   | T-A879960   | Air Filter |
| C42/2   | T-A879060   | Air Filter |
| C42475  | T-A87414960 | Air Filter |
| C42723  | T-A87414860 | Air Filter |
| C43     | T-A8710560  | Air Filter |
| C43/1   | T-A8768960  | Air Filter |
| C43/2   | T-A8778960  | Air Filter |
| C43/3   | T-A8783960  | Air Filter |
| C44     | T-A8711560  | Air Filter |
| C44/2   | T-A87130960 | Air Filter |
| C44/3   | T-A8779360  | Air Filter |
| C44/5   | T-A8785360  | Air Filter |
| C44/6   | T-A87124160 | Air Filter |
| C44/7   | T-A8771260  | Air Filter |
| C45/1   | T-A8785260  | Air Filter |
| C45/2   | T-A8771360  | Air Filter |
| C452150 | T-A87135760 | Air Filter |
| C453265 | T-A87124360 | Air Filter |
| C454444 | T-A87134060 | Air Filter |
| C46     | T-A8712160  | Air Filter |
| C48     | T-A8710060  | Air Filter |
| C48/2   | T-A8770860  | Air Filter |
| C55     | T-A8769560  | Air Filter |
| C56/1   | T-A8769460  | Air Filter |
| C571895 | T-A87134160 | Air Filter |
| C610/2  | T-A8710360  | Air Filter |
| C612/1  | T-A8769260  | Air Filter |
| C63     | T-A87235560 | Air Filter |
| C630    | T-A8798260  | Air Filter |
| C64/1   | T-A8711160  | Air Filter |
| C64/3   | T-A876260   | Air Filter |
| C65     | T-A8779160  | Air Filter |
| C65/4   | T-A8710760  | Air Filter |
| C66     | T-A878960   | Air Filter |
| C66/1   | T-A8712660  | Air Filter |
| C67     | T-A8779260  | Air Filter |
| C69/1   | T-A8711760  | Air Filter |
| C711    | T-A8713060  | Air Filter |
| C711/1  | T-A8712360  | Air Filter |
| C711/2  | T-A8778660  | Air Filter |
| C712    | T-A8713960  | Air Filter |
| C713    | T-A879360   | Air Filter |
| C713/1  | T-A8769160  | Air Filter |
| C713/3  | T-A8769160  | Air Filter |
| C715    | T-A87131060 | Air Filter |
| C717/1  | T-A8769360  | Air Filter |

|           |             |            |
|-----------|-------------|------------|
| C718      | T-A8710260  | Air Filter |
| C718/1    | T-A87113960 | Air Filter |
| C74       | T-A8710860  | Air Filter |
| C75       | T-A879160   | Air Filter |
| C75/1     | T-A8711260  | Air Filter |
| C75/2     | T-A8711260  | Air Filter |
| C75/3     | T-A8796960  | Air Filter |
| C75/4     | T-A8765560  | Air Filter |
| C76/14    | T-A8784160  | Air Filter |
| C76/2     | T-A8712760  | Air Filter |
| C78       | T-A87230960 | Air Filter |
| C78/2     | T-A8711060  | Air Filter |
| C78/5     | T-A87131160 | Air Filter |
| C78/6     | T-A8712860  | Air Filter |
| C79/1     | T-A8712560  | Air Filter |
| C79/2     | T-A87230860 | Air Filter |
| C8005     | T-A87112960 | Air Filter |
| C824      | T-A8795860  | Air Filter |
| C912      | T-A8710460  | Air Filter |
| C914      | T-A8788260  | Air Filter |
| C922/1    | T-A8771160  | Air Filter |
| C934x     | T-A87128160 | Air Filter |
| C940      | T-A87126960 | Air Filter |
| C946      | T-A8779660  | Air Filter |
| C946/2    | T-A8779660  | Air Filter |
| CF100     | T-A8770160  | Air Filter |
| CF1000    | T-A874560   | Air Filter |
| CF1122    | T-A8715160  | Air Filter |
| CF1140    | T-A872570   | Air Filter |
| CF1140/2  | T-A872570   | Air Filter |
| CF1200    | T-A874460   | Air Filter |
| CF1295    | T-A87130660 | Air Filter |
| CF1300    | T-A874360   | Air Filter |
| CF15116/2 | T-A872670   | Air Filter |
| CF1600    | T-A875560   | Air Filter |
| CF1650    | T-A87125160 | Air Filter |
| CF18190/2 | T-A8772360  | Air Filter |
| CF200     | T-A8770260  | Air Filter |
| CF2100    | T-A872170   | Air Filter |
| CF22269   | T-A8721360  | Air Filter |
| CF240     | T-A87146960 | Air Filter |
| CF300     | T-A8770360  | Air Filter |
| CF355     | T-A87147160 | Air Filter |
| CF400     | T-A8770460  | Air Filter |
| CF500     | T-A8770560  | Air Filter |
| CF510     | T-A87147360 | Air Filter |
| CF600     | T-A8780560  | Air Filter |
| CF610     | T-A8793660  | Air Filter |
| CF620     | T-A8777960  | Air Filter |
| CF700     | T-A8746660  | Air Filter |
| CF710     | T-A876970   | Air Filter |



# CATALOGUE 2026

21.12.2025

|            |              |                   |
|------------|--------------|-------------------|
| CF800      | T-A8745160   | Air Filter        |
| CF810      | T-A871070    | Air Filter        |
| CF820      | T-A8714460   | Air Filter        |
| CF830      | T-A8714360   | Air Filter        |
| CF850      | T-A8778060   | Air Filter        |
| CF850/2    | T-A8778060   | Air Filter        |
| CF922      | T-A872460    | Air Filter        |
| CF923      | T-A8715060   | Air Filter        |
| CF970      | T-A8778160   | Air Filter        |
| CF990      | T-A8778160   | Air Filter        |
| CF990/2    | T-A8778160   | Air Filter        |
| CP25150    | T-A87126060  | Air Filter        |
| D99683636  | T-FS8220     | Air-Oil Separator |
| H1070      | T-FO329180   | Hydraulic Filter  |
| H1095      | T-FO329280   | Hydraulic Filter  |
| H1142      | T-FO322780   | Hydraulic Filter  |
| H12014x    | T-FO3270280  | Hydraulic Filter  |
| H13104     | T-FO323080   | Hydraulic Filter  |
| H1376      | T-FO323180   | Hydraulic Filter  |
| H15190/16  | T-A87120560  | Air Filter        |
| H15263     | T-FO329380   | Hydraulic Filter  |
| H15395     | T-FO329480   | Hydraulic Filter  |
| HD10245    | T-FO324480   | Hydraulic Filter  |
| HD15002    | T-FO32119580 | Oil Filter        |
| HD56/1     | T-FO32111080 | Hydraulic Filter  |
| HD806      | T-FO3218580  | Oil Filter        |
| HD825/2    | T-FO3216080  | Oil Filter        |
| HD929      | T-FO32117380 | Hydraulic Filter  |
| HU718/1x   | T-FO3223480  | Oil Filter        |
| HU832      | T-FO32102080 | Oil Filter        |
| HU832/1    | T-FO32100100 | Oil Filter        |
| HU864      | T-FO32101480 | Oil Filter        |
| HU864/1    | T-FO32100990 | Oil Filter        |
| K489780    | T-FS213220   | Air-Oil Separator |
| LB11102    | T-FS950      | Air-Oil Separator |
| LB11102/11 | T-FS990209   | Air-Oil Separator |
| LB11102/2  | T-FS950      | Air-Oil Separator |
| LB11102/20 | T-FS990136   | Air-Oil Separator |
| LB11102/21 | T-FSP01450   | Air-Oil Separator |
| LB11102/5  | T-FS3150     | Air-Oil Separator |
| LB11102/8  | T-FS990121   | Air-Oil Separator |
| LB11102/9  | T-FS990165   | Air-Oil Separator |
| LB1160     | T-FS1350     | Air-Oil Separator |
| LB13145    | T-FS450      | Air-Oil Separator |
| LB13145/14 | T-FS990290   | Air-Oil Separator |
| LB13145/20 | T-FSP03250   | Air-Oil Separator |
| LB13145/21 | T-FS990034   | Air-Oil Separator |
| LB13145/22 | T-FS990351   | Air-Oil Separator |
| LB13145/25 | T-FS990144   | Air-Oil Separator |
| LB13145/27 | T-FS990192   | Air-Oil Separator |
| LB13145/29 | T-FS990135   | Air-Oil Separator |

|            |            |                   |
|------------|------------|-------------------|
| LB13145/3  | T-FS450    | Air-Oil Separator |
| LB13145/30 | T-FS990428 | Air-Oil Separator |
| LB13145/50 | T-FS990429 | Air-Oil Separator |
| LB13145/51 | T-FS990034 | Air-Oil Separator |
| LB13145/6  | T-FS990034 | Air-Oil Separator |
| LB13145/7  | T-FS990044 | Air-Oil Separator |
| LB13145/8  | T-FS3250   | Air-Oil Separator |
| LB1374     | T-FS650    | Air-Oil Separator |
| LB1374/2   | T-FS650    | Air-Oil Separator |
| LB1374/20  | T-FS990154 | Air-Oil Separator |
| LB1374/21  | T-FS990235 | Air-Oil Separator |
| LB1374/29  | T-FS990152 | Air-Oil Separator |
| LB1374/30  | T-FS990430 | Air-Oil Separator |
| LB1374/4   | T-FS990052 | Air-Oil Separator |
| LB1374/50  | T-FS990431 | Air-Oil Separator |
| LB712      | T-FS990006 | Air-Oil Separator |
| LB712/2    | T-FS990006 | Air-Oil Separator |
| LB719      | T-FS1050   | Air-Oil Separator |
| LB719/2    | T-FS1050   | Air-Oil Separator |
| LB719/20   | T-FS990185 | Air-Oil Separator |
| LB719/3    | T-FS3550   | Air-Oil Separator |
| LB719/4    | T-FS990277 | Air-Oil Separator |
| LB719/50   | T-FS990418 | Air-Oil Separator |
| LB719/6    | T-FS990003 | Air-Oil Separator |
| LB950      | T-FS2250   | Air-Oil Separator |
| LB950/20   | T-FS990432 | Air-Oil Separator |
| LB962      | T-FS550    | Air-Oil Separator |
| LB962/10   | T-FS990179 | Air-Oil Separator |
| LB962/2    | T-FS550    | Air-Oil Separator |
| LB962/20   | T-FSP03350 | Air-Oil Separator |
| LB962/21   | T-FSP01550 | Air-Oil Separator |
| LB962/22   | T-FS2150   | Air-Oil Separator |
| LB962/22   | T-FS990433 | Air-Oil Separator |
| LB962/23   | T-FS990069 | Air-Oil Separator |
| LB962/3    | T-FS990091 | Air-Oil Separator |
| LB962/4    | T-FS990092 | Air-Oil Separator |
| LB962/50   | T-FS990434 | Air-Oil Separator |
| LB962/6    | T-FS2150   | Air-Oil Separator |
| LB962/7    | T-FS990207 | Air-Oil Separator |
| LB962/8    | T-FSP02550 | Air-Oil Separator |
| LB962/9    | T-FS990037 | Air-Oil Separator |
| LD10001/1x | T-M14790   | In-Line Filter    |
| LD10001/2x | T-M14590   | In-Line Filter    |
| LD10001/3x | T-M14890   | In-Line Filter    |
| LD10001x   | T-M14690   | In-Line Filter    |
| LD10002/1x | T-M15190   | In-Line Filter    |
| LD10002/2x | T-M14990   | In-Line Filter    |
| LD10002/3x | T-M15290   | In-Line Filter    |
| LD10002x   | T-M15090   | In-Line Filter    |
| LD12001    | T-M17990   | In-Line Filter    |
| LD12001/1  | T-M18090   | In-Line Filter    |

|            |           |                |
|------------|-----------|----------------|
| LD12001/3  | T-M18190  | In-Line Filter |
| LD12002    | T-M18290  | In-Line Filter |
| LD12002/1  | T-M18390  | In-Line Filter |
| LD12002/3  | T-M18490  | In-Line Filter |
| LD14001/1x | T-M135090 | In-Line Filter |
| LD14001/2x | T-M134990 | In-Line Filter |
| LD14001/3x | T-M135190 | In-Line Filter |
| LD14001x   | T-M135290 | In-Line Filter |
| LD14002/1x | T-M15590  | In-Line Filter |
| LD14002/2x | T-M15390  | In-Line Filter |
| LD14002/3x | T-M15690  | In-Line Filter |
| LD14002x   | T-M15490  | In-Line Filter |
| LD14003    | T-M173    | In-Line Filter |
| LD14003/1  | T-M195    | In-Line Filter |
| LD14003/3  | T-M1106   | In-Line Filter |
| LD14004    | T-M118290 | In-Line Filter |
| LD14004/1  | T-M118490 | In-Line Filter |
| LD14004/2  | T-M151    | In-Line Filter |
| LD14004/3  | T-M118590 | In-Line Filter |
| LD4001     | T-M15790  | In-Line Filter |
| LD4001/1   | T-M15890  | In-Line Filter |
| LD4001/3   | T-M15990  | In-Line Filter |
| LD4002     | T-M112690 | In-Line Filter |
| LD4002/1   | T-M112890 | In-Line Filter |
| LD4002/2   | T-M137    | In-Line Filter |
| LD4002/3   | T-M112990 | In-Line Filter |
| LD4003     | T-M113490 | In-Line Filter |
| LD4003/1   | T-M113690 | In-Line Filter |
| LD4003/2   | T-M139    | In-Line Filter |
| LD4003/3   | T-M113790 | In-Line Filter |
| LD5001/1x  | T-M1209   | In-Line Filter |
| LD5001/2x  | T-M1208   | In-Line Filter |
| LD5001/3   | T-M1207   | In-Line Filter |
| LD5001/3x  | T-M1207   | In-Line Filter |
| LD5002     | T-M16090  | In-Line Filter |
| LD5002/1   | T-M16190  | In-Line Filter |
| LD5002/3   | T-M16290  | In-Line Filter |
| LD5003     | T-M16390  | In-Line Filter |
| LD5003/1   | T-M16490  | In-Line Filter |
| LD5003/3   | T-M16590  | In-Line Filter |
| LD5004     | T-M163    | In-Line Filter |
| LD5004/1   | T-M185    | In-Line Filter |
| LD5004/3   | T-M196    | In-Line Filter |
| LD5005     | T-M113090 | In-Line Filter |
| LD5005/1   | T-M113290 | In-Line Filter |
| LD5005/2   | T-M138    | In-Line Filter |
| LD5005/3   | T-M113390 | In-Line Filter |
| LD5006     | T-M113890 | In-Line Filter |
| LD5006/1   | T-M114090 | In-Line Filter |
| LD5006/2   | T-M140    | In-Line Filter |
| LD5006/3   | T-M114190 | In-Line Filter |

|           |           |                |
|-----------|-----------|----------------|
| LD5007    | T-M114290 | In-Line Filter |
| LD5007/1  | T-M114290 | In-Line Filter |
| LD5007/1  | T-M114490 | In-Line Filter |
| LD5007/2  | T-M141    | In-Line Filter |
| LD5007/3  | T-M114590 | In-Line Filter |
| LD6001/1x | T-M11990  | In-Line Filter |
| LD6001/2x | T-M11790  | In-Line Filter |
| LD6001/3x | T-M12090  | In-Line Filter |
| LD6001x   | T-M11890  | In-Line Filter |
| LD6002/1x | T-M12390  | In-Line Filter |
| LD6002/2x | T-M12190  | In-Line Filter |
| LD6002/3x | T-M12490  | In-Line Filter |
| LD6002x   | T-M12290  | In-Line Filter |
| LD6003/1x | T-M12790  | In-Line Filter |
| LD6003/2x | T-M12590  | In-Line Filter |
| LD6003/3x | T-M12890  | In-Line Filter |
| LD6003x   | T-M12690  | In-Line Filter |
| LD6004    | T-M164    | In-Line Filter |
| LD6004/1  | T-M186    | In-Line Filter |
| LD6004/3  | T-M197    | In-Line Filter |
| LD6005    | T-M165    | In-Line Filter |
| LD6005/1  | T-M187    | In-Line Filter |
| LD6005/3  | T-M198    | In-Line Filter |
| LD6006    | T-M114690 | In-Line Filter |
| LD6006/1  | T-M114890 | In-Line Filter |
| LD6006/2  | T-M142    | In-Line Filter |
| LD6006/3  | T-M114990 | In-Line Filter |
| LD6007    | T-M115090 | In-Line Filter |
| LD6007/1  | T-M115290 | In-Line Filter |
| LD6007/2  | T-M143    | In-Line Filter |
| LD6007/3  | T-M115390 | In-Line Filter |
| LD6008    | T-M1223   | In-Line Filter |
| LD6008/1  | T-M1235   | In-Line Filter |
| LD6008/2  | T-M1211   | In-Line Filter |
| LD6008/3  | T-M1259   | In-Line Filter |
| LD6009    | T-M1224   | In-Line Filter |
| LD6009/1  | T-M1236   | In-Line Filter |
| LD6009/2  | T-M1212   | In-Line Filter |
| LD6009/3  | T-M1260   | In-Line Filter |
| LD6010    | T-M1225   | In-Line Filter |
| LD6010/1  | T-M1237   | In-Line Filter |
| LD6010/2  | T-M1213   | In-Line Filter |
| LD6010/3  | T-M1261   | In-Line Filter |
| LD6011    | T-M1226   | In-Line Filter |
| LD6011/1  | T-M1238   | In-Line Filter |
| LD6011/2  | T-M1214   | In-Line Filter |
| LD6011/3  | T-M1262   | In-Line Filter |
| LD6012    | T-M1227   | In-Line Filter |
| LD6012/1  | T-M1239   | In-Line Filter |
| LD6012/2  | T-M1215   | In-Line Filter |
| LD6012/3  | T-M1263   | In-Line Filter |

|           |           |                |
|-----------|-----------|----------------|
| LD7001    | T-M166    | In-Line Filter |
| LD7001/1  | T-M188    | In-Line Filter |
| LD7001/3  | T-M199    | In-Line Filter |
| LD7002    | T-M167    | In-Line Filter |
| LD7002/1  | T-M189    | In-Line Filter |
| LD7002/3  | T-M1100   | In-Line Filter |
| LD7003    | T-M115490 | In-Line Filter |
| LD7003/1  | T-M115690 | In-Line Filter |
| LD7003/2  | T-M144    | In-Line Filter |
| LD7003/3  | T-M115790 | In-Line Filter |
| LD7004    | T-M115890 | In-Line Filter |
| LD7004/1  | T-M116090 | In-Line Filter |
| LD7004/2  | T-M145    | In-Line Filter |
| LD7004/3  | T-M116190 | In-Line Filter |
| LD7005    | T-M1228   | In-Line Filter |
| LD7005/1  | T-M1240   | In-Line Filter |
| LD7005/3  | T-M1264   | In-Line Filter |
| LD7006    | T-M1229   | In-Line Filter |
| LD7006/1  | T-M1241   | In-Line Filter |
| LD7006/2  | T-M1217   | In-Line Filter |
| LD7006/3  | T-M1265   | In-Line Filter |
| LD8001/1x | T-M13190  | In-Line Filter |
| LD8001/2x | T-M12990  | In-Line Filter |
| LD8001/3x | T-M13290  | In-Line Filter |
| LD8001x   | T-M13090  | In-Line Filter |
| LD8002/1x | T-M13590  | In-Line Filter |
| LD8002/2x | T-M13390  | In-Line Filter |
| LD8002/3x | T-M13690  | In-Line Filter |
| LD8002x   | T-M13490  | In-Line Filter |
| LD8003/1x | T-M13990  | In-Line Filter |
| LD8003/2x | T-M13790  | In-Line Filter |
| LD8003/3x | T-M14090  | In-Line Filter |
| LD8003x   | T-M13890  | In-Line Filter |
| LD8004/1x | T-M14390  | In-Line Filter |
| LD8004/2x | T-M14190  | In-Line Filter |
| LD8004/3x | T-M14490  | In-Line Filter |
| LD8004x   | T-M14290  | In-Line Filter |
| LD8005    | T-M16690  | In-Line Filter |
| LD8005/1  | T-M16790  | In-Line Filter |
| LD8005/3  | T-M16890  | In-Line Filter |
| LD8006    | T-M16990  | In-Line Filter |
| LD8006/1  | T-M134890 | In-Line Filter |
| LD9001    | T-M17390  | In-Line Filter |
| LD9001/1  | T-M17490  | In-Line Filter |
| LD9001/3  | T-M17590  | In-Line Filter |
| LD9002    | T-M17690  | In-Line Filter |
| LD9002/1  | T-M17790  | In-Line Filter |
| LD9002/3  | T-M17890  | In-Line Filter |
| LD9003    | T-M168    | In-Line Filter |
| LD9003/1  | T-M190    | In-Line Filter |
| LD9003/3  | T-M1101   | In-Line Filter |

|           |           |                |
|-----------|-----------|----------------|
| LD9005    | T-M169    | In-Line Filter |
| LD9005/1  | T-M191    | In-Line Filter |
| LD9005/3  | T-M1102   | In-Line Filter |
| LD9006    | T-M170    | In-Line Filter |
| LD9006/1  | T-M192    | In-Line Filter |
| LD9006/3  | T-M1103   | In-Line Filter |
| LD9007    | T-M171    | In-Line Filter |
| LD9007/1  | T-M193    | In-Line Filter |
| LD9007/3  | T-M1104   | In-Line Filter |
| LD9008    | T-M172    | In-Line Filter |
| LD9008/1  | T-M194    | In-Line Filter |
| LD9008/3  | T-M1105   | In-Line Filter |
| LD9009    | T-M116290 | In-Line Filter |
| LD9009/1  | T-M116490 | In-Line Filter |
| LD9009/2  | T-M146    | In-Line Filter |
| LD9009/3  | T-M116590 | In-Line Filter |
| LD9010    | T-M116690 | In-Line Filter |
| LD9010/1  | T-M116890 | In-Line Filter |
| LD9010/2  | T-M147    | In-Line Filter |
| LD9010/3  | T-M116990 | In-Line Filter |
| LD9011    | T-M117090 | In-Line Filter |
| LD9011/1  | T-M117290 | In-Line Filter |
| LD9011/2  | T-M148    | In-Line Filter |
| LD9011/3  | T-M117390 | In-Line Filter |
| LD9012    | T-M117490 | In-Line Filter |
| LD9012/1  | T-M117690 | In-Line Filter |
| LD9012/2  | T-M149    | In-Line Filter |
| LD9012/3  | T-M117790 | In-Line Filter |
| LD9013    | T-M117890 | In-Line Filter |
| LD9013/1  | T-M118090 | In-Line Filter |
| LD9013/2  | T-M150    | In-Line Filter |
| LD9013/3  | T-M118190 | In-Line Filter |
| LD9015    | T-M1230   | In-Line Filter |
| LD9015/1  | T-M1242   | In-Line Filter |
| LD9015/2  | T-M1218   | In-Line Filter |
| LD9015/3  | T-M1266   | In-Line Filter |
| LD9016    | T-M1231   | In-Line Filter |
| LD9016/1  | T-M1243   | In-Line Filter |
| LD9016/2  | T-M1219   | In-Line Filter |
| LD9016/3  | T-M1267   | In-Line Filter |
| LD9017    | T-M1232   | In-Line Filter |
| LD9017/1  | T-M1244   | In-Line Filter |
| LD9017/2  | T-M1220   | In-Line Filter |
| LD9017/3  | T-M1268   | In-Line Filter |
| LD9018/1x | T-M1245   | In-Line Filter |
| LD9018/2x | T-M1221   | In-Line Filter |
| LD9018/3x | T-M1269   | In-Line Filter |
| LD9018x   | T-M1233   | In-Line Filter |
| LD9019/1x | T-M1246   | In-Line Filter |
| LD9019/2x | T-M1222   | In-Line Filter |
| LD9019/3x | T-M1270   | In-Line Filter |

|           |               |                                   |
|-----------|---------------|-----------------------------------|
| LE10001   | T-FS11520     | Air-Oil Separator                 |
| LE10002   | T-FS110       | Air-Oil Separator                 |
| LE10003x  | T-FS430       | Air-Oil Separator                 |
| LE10004   | T-FS18710     | Air-Oil Separator                 |
| LE10005x  | T-FS8520      | Air-Oil Separator                 |
| LE10008   | T-FS965415    | Air-Oil Separator                 |
| LE1001    | T-FS32310     | Air-Oil Separator                 |
| LE10010   | T-FS965412    | Air-Oil Separator                 |
| LE10022   | T-FS34520     | Air-Oil Separator                 |
| LE1003    | T-FS990199    | Air-Oil Separator Plastic Version |
| LE1004    | T-FS965406    | Air-Oil Separator                 |
| LE1005    | T-FS12410     | Air-Oil Separator                 |
| LE1006    | T-FS990199    | Air-Oil Separator Plastic Version |
| LE1007    | T-FS965406    | Air-Oil Separator                 |
| LE11001   | T-FS990426    | Air-Oil Separator                 |
| LE11002x  | T-FS48620     | Air-Oil Separator                 |
| LE11003   | T-FS10810     | Air-Oil Separator                 |
| LE114001x | T-FS990283    | Air-Oil Separator                 |
| LE12001x  | T-FS10320     | Air-Oil Separator                 |
| LE12002   | T-FS532304-HQ | Air-Oil Separator Iron end caps   |
| LE12003   | T-FS532304-HQ | Air-Oil Separator Iron end caps   |
| LE12006   | T-FS532507-HQ | Air-Oil Separator Iron end caps   |
| LE12015   | T-FS4620      | Air-Oil Separator                 |
| LE13001x  | T-FS990215    | Air-Oil Separator                 |
| LE13002x  | T-FS530       | Air-Oil Separator                 |
| LE13003x  | T-FS12320     | Air-Oil Separator                 |
| LE13004   | T-FS1330      | Air-Oil Separator                 |
| LE13005x  | T-FS3820      | Air-Oil Separator                 |
| LE13006   | T-FS630       | Air-Oil Separator                 |
| LE13007x  | T-FS38520     | Air-Oil Separator                 |
| LE13008   | T-FS410       | Air-Oil Separator                 |
| LE13009x  | T-FS320       | Air-Oil Separator                 |
| LE13012x  | T-FS18620     | Air-Oil Separator                 |
| LE13013x  | T-FS620       | Air-Oil Separator                 |
| LE13014x  | T-FS7220      | Air-Oil Separator                 |
| LE13037x  | T-FS990216    | Air-Oil Separator                 |
| LE135002x | T-FS12920     | Air-Oil Separator                 |
| LE135003x | T-FS5530      | Air-Oil Separator                 |
| LE14001x  | T-FS16020     | Air-Oil Separator                 |
| LE14002   | T-FS990096    | Air-Oil Separator                 |
| LE14003   | T-FS13510     | Air-Oil Separator                 |
| LE14004x  | T-FS8720      | Air-Oil Separator                 |
| LE15002x  | T-FS4120      | Air-Oil Separator                 |
| LE15011   | T-FS9820      | Air-Oil Separator                 |
| LE15013x  | T-FSP00230    | Air-Oil Separator                 |
| LE16003x  | T-FS6220      | Air-Oil Separator                 |
| LE16015x  | T-FSP09430    | Air-Oil Separator                 |
| LE17005x  | T-FS3620      | Air-Oil Separator                 |
| LE17006x  | T-FS19020     | Air-Oil Separator                 |
| LE17007x  | T-FS2630      | Air-Oil Separator                 |
| LE17008x  | T-FS10230     | Air-Oil Separator                 |

|          |               |                                 |
|----------|---------------|---------------------------------|
| LE17009x | T-FS920       | Air-Oil Separator               |
| LE17011x | T-FS13220     | Air-Oil Separator               |
| LE17013x | T-FS3620      | Air-Oil Separator               |
| LE17031  | T-FS29420     | Air-Oil Separator               |
| LE18001x | T-FS990221    | Air-Oil Separator               |
| LE18004  | T-FS7720      | Air-Oil Separator               |
| LE19001x | T-FS12820     | Air-Oil Separator               |
| LE19002  | T-FS19010     | Air-Oil Separator               |
| LE2002   | T-FS28010     | Air-Oil Separator               |
| LE2003   | T-FS14810     | Air-Oil Separator               |
| LE2004   | T-FS532216    | Air-Oil Separator               |
| LE2006   | T-FS730936    | Air-Oil Separator               |
| LE2007   | T-FS990149    | Air-Oil Separator               |
| LE2008   | T-FS730946    | Air-Oil Separator               |
| LE2009   | T-FS532216    | Air-Oil Separator               |
| LE2010   | T-FS518358    | Air-Oil Separator               |
| LE2011   | T-FS731400    | Air-Oil Separator               |
| LE21001x | T-FS15620     | Air-Oil Separator               |
| LE21007  | T-FS990147    | Air-Oil Separator               |
| LE22002x | T-FS13120     | Air-Oil Separator               |
| LE22003x | T-FS990127    | Air-Oil Separator               |
| LE22005x | T-FS14720     | Air-Oil Separator               |
| LE22007x | T-FSP28220    | Air-Oil Separator               |
| LE22008x | T-FS8620      | Air-Oil Separator               |
| LE22009x | T-FS10420     | Air-Oil Separator               |
| LE23001x | T-FS1320      | Air-Oil Separator               |
| LE23002x | T-FS7530      | Air-Oil Separator               |
| LE24002x | T-FS6430      | Air-Oil Separator               |
| LE24003x | T-FS1220      | Air-Oil Separator               |
| LE25001  | T-FS965411    | Air-Oil Separator               |
| LE26001x | T-FS4320      | Air-Oil Separator               |
| LE27002x | T-FS4430      | Air-Oil Separator               |
| LE27003x | T-FS9920      | Air-Oil Separator               |
| LE27004x | T-FS4430      | Air-Oil Separator               |
| LE27006x | T-FS31220     | Air-Oil Separator               |
| LE27007x | T-FS2220      | Air-Oil Separator               |
| LE28002x | T-FS11820     | Air-Oil Separator               |
| LE28003x | T-FS14620     | Air-Oil Separator               |
| LE28004x | T-FSP20520    | Air-Oil Separator               |
| LE28021  | T-FS990363    | Air-Oil Separator               |
| LE29001x | T-FS42420     | Air-Oil Separator               |
| LE29005x | T-FS13420     | Air-Oil Separator               |
| LE30004  | T-FS23710     | Air-Oil Separator               |
| LE30005x | T-FS13020     | Air-Oil Separator               |
| LE3002   | T-FS965413    | Air-Oil Separator               |
| LE3004x  | T-FS3930      | Air-Oil Separator               |
| LE3005   | T-FS965414    | Air-Oil Separator               |
| LE3006   | T-FS14710     | Air-Oil Separator               |
| LE3007   | T-FS731023    | Air-Oil Separator               |
| LE3008   | T-FS965404    | Air-Oil Separator               |
| LE3009   | T-FS532510-HQ | Air-Oil Separator Iron end caps |

|          |            |                   |
|----------|------------|-------------------|
| LE3018   | T-FS731468 | Air-Oil Separator |
| LE31001x | T-FS10820  | Air-Oil Separator |
| LE31002  | T-FS9630   | Air-Oil Separator |
| LE31003x | T-FS1820   | Air-Oil Separator |
| LE31003x | T-FS1820   | Air-Oil Separator |
| LE31003x | T-FS1820   | Air-Oil Separator |
| LE33003x | T-FS12720  | Air-Oil Separator |
| LE35002x | T-FS2320   | Air-Oil Separator |
| LE35004x | T-FS13820  | Air-Oil Separator |
| LE38002x | T-FS990027 | Air-Oil Separator |
| LE38004x | T-FS10220  | Air-Oil Separator |
| LE38006x | T-FS990027 | Air-Oil Separator |
| LE38022  | T-FS41320  | Air-Oil Separator |
| LE38023  | T-FSP00130 | Air-Oil Separator |
| LE39002x | T-FS2420   | Air-Oil Separator |
| LE39004x | T-FS2420   | Air-Oil Separator |
| LE4002x  | T-FS1310   | Air-Oil Separator |
| LE4004   | T-FS200910 | Air-Oil Separator |
| LE4006x  | T-FSP30520 | Air-Oil Separator |
| LE4007x  | T-FS379300 | Air-Oil Separator |
| LE4008   | T-FS532300 | Air-Oil Separator |
| LE4010   | T-FS20610  | Air-Oil Separator |
| LE4011x  | T-FS730937 | Air-Oil Separator |
| LE4012   | T-FS12010  | Air-Oil Separator |
| LE4014   | T-FS731630 | Air-Oil Separator |
| LE4022   | T-FS731401 | Air-Oil Separator |
| LE42001x | T-FS990226 | Air-Oil Separator |
| LE42002x | T-FS2020   | Air-Oil Separator |
| LE43001x | T-FS12420  | Air-Oil Separator |
| LE43002x | T-FS2620   | Air-Oil Separator |
| LE43005  | T-FS990116 | Air-Oil Separator |
| LE44001x | T-FS44020  | Air-Oil Separator |
| LE44002  | T-FS8420   | Air-Oil Separator |
| LE46001x | T-FS10720  | Air-Oil Separator |
| LE47001x | T-FS19920  | Air-Oil Separator |
| LE47001x | T-FS19920  | Air-Oil Separator |
| LE48002  | T-FS16820  | Air-Oil Separator |
| LE48003  | T-FS8920   | Air-Oil Separator |
| LE48004x | T-FS2720   | Air-Oil Separator |
| LE48007x | T-FS8920   | Air-Oil Separator |
| LE48022  | T-FS8820   | Air-Oil Separator |
| LE49001x | T-FS990260 | Air-Oil Separator |
| LE5001x  | T-FS1410   | Air-Oil Separator |
| LE5002   | T-FS8110   | Air-Oil Separator |
| LE5004   | T-FS9330   | Air-Oil Separator |
| LE5005   | T-FS30710  | Air-Oil Separator |
| LE5006   | T-FS990033 | Air-Oil Separator |
| LE5007   | T-FS965408 | Air-Oil Separator |
| LE5008   | T-FS13310  | Air-Oil Separator |
| LE5009x  | T-FS24220  | Air-Oil Separator |
| LE5010   | T-FS990105 | Air-Oil Separator |

|          |               |                                 |
|----------|---------------|---------------------------------|
| LE5011   | T-FS532512-HQ | Air-Oil Separator Iron end caps |
| LE5012   | T-FS8010      | Air-Oil Separator               |
| LE51001x | T-FS14120     | Air-Oil Separator               |
| LE57001x | T-FS3020      | Air-Oil Separator               |
| LE57002x | T-FS9020      | Air-Oil Separator               |
| LE57003x | T-FS2920      | Air-Oil Separator               |
| LE57004x | T-FS990080    | Air-Oil Separator               |
| LE57006x | T-FS9020      | Air-Oil Separator               |
| LE6001   | T-FS18510     | Air-Oil Separator               |
| LE6002   | T-FS11010     | Air-Oil Separator               |
| LE6003x  | T-FS24530     | Air-Oil Separator               |
| LE6004   | T-FS367220    | Air-Oil Separator               |
| LE6005   | T-FS27430     | Air-Oil Separator               |
| LE6006x  | T-FS1510      | Air-Oil Separator               |
| LE6007   | T-FS210       | Air-Oil Separator               |
| LE6008   | T-FS532302-HQ | Air-Oil Separator Iron end caps |
| LE6009x  | T-FS120       | Air-Oil Separator               |
| LE6010   | T-FS5910      | Air-Oil Separator               |
| LE6012   | T-FS4210      | Air-Oil Separator               |
| LE6013   | T-FS71064763  | Air-Oil Separator               |
| LE6014   | T-FS532509-HQ | Air-Oil Separator Iron end caps |
| LE6023   | T-FS37320     | Air-Oil Separator               |
| LE61001  | T-FS9420      | Air-Oil Separator               |
| LE61002x | T-FSP21020    | Air-Oil Separator               |
| LE63001x | T-FS3020      | Air-Oil Separator               |
| LE63002x | T-FS3020      | Air-Oil Separator               |
| LE64001x | T-FS18520     | Air-Oil Separator               |
| LE65005x | T-FS990018    | Air-Oil Separator               |
| LE66002x | T-FSP20620    | Air-Oil Separator               |
| LE66004x | T-FS16720     | Air-Oil Separator               |
| LE68001  | T-FS43520     | Air-Oil Separator               |
| LE7002x  | T-FS11810     | Air-Oil Separator               |
| LE7003x  | T-FS3130      | Air-Oil Separator               |
| LE7004x  | T-FS5720      | Air-Oil Separator               |
| LE7009   | T-FS990103    | Air-Oil Separator               |
| LE71001x | T-FS5120      | Air-Oil Separator               |
| LE71002x | T-FS3120      | Air-Oil Separator               |
| LE76001x | T-FS14820     | Air-Oil Separator               |
| LE76002x | T-FS9830      | Air-Oil Separator               |
| LE76010x | T-FS353420    | Air-Oil Separator               |
| LE78001x | T-FS5520      | Air-Oil Separator               |
| LE78002x | T-FS6120      | Air-Oil Separator               |
| LE8002   | T-FS965409    | Air-Oil Separator               |
| LE8003x  | T-FS3830      | Air-Oil Separator               |
| LE8004x  | T-FS3140      | Air-Oil Separator               |
| LE8005   | T-FS965416    | Air-Oil Separator               |
| LE8006   | T-FS965402    | Air-Oil Separator               |
| LE8007x  | T-FS5920      | Air-Oil Separator               |
| LE8008   | T-FS8610      | Air-Oil Separator               |
| LE90001x | T-FS990196    | Air-Oil Separator               |
| LE9002x  | T-FS6420      | Air-Oil Separator               |



# CATALOGUE 2026

21.12.2025

|           |               |                                 |
|-----------|---------------|---------------------------------|
| LE9003x   | T-FS32620     | Air-Oil Separator               |
| LE9004    | T-FS5730      | Air-Oil Separator               |
| LE9005    | T-FS990220    | Air-Oil Separator               |
| LE9006x   | T-FS6410      | Air-Oil Separator               |
| LE9007    | T-FS990130    | Air-Oil Separator               |
| LE9008    | T-FS6930      | Air-Oil Separator               |
| LE9009    | T-FS532303-HQ | Air-Oil Separator Iron end caps |
| LE9010x   | T-FS220       | Air-Oil Separator               |
| LE9013x   | T-FS44320     | Air-Oil Separator               |
| LE9015x   | T-FS420       | Air-Oil Separator               |
| LE9016    | T-FS532303-HQ | Air-Oil Separator Iron end caps |
| LE9018    | T-FS71064773  | Air-Oil Separator               |
| LE9019    | T-FS532508-HQ | Air-Oil Separator Iron end caps |
| LE9020x   | T-FS7420      | Air-Oil Separator               |
| LE9033    | T-FS990157    | Air-Oil Separator               |
| LE95001x  | T-FS8430      | Air-Oil Separator               |
| LE95002   | T-FS14720     | Air-Oil Separator               |
| R12356422 | T-FS7220      | Air-Oil Separator               |
| R17621403 | T-FS35120     | Air-Oil Separator               |
| R17922091 | T-FS18320     | Air-Oil Separator               |
| R18201776 | T-FS11520     | Air-Oil Separator               |
| R18210776 | T-FS11520     | Air-Oil Separator               |
| R18239784 | T-FS7720      | Air-Oil Separator               |
| R18286637 | T-FS13620     | Air-Oil Separator               |
| R18345327 | T-FS8820      | Air-Oil Separator               |
| R18356414 | T-FS9820      | Air-Oil Separator               |
| R18375563 | T-FS3720      | Air-Oil Separator               |
| R38048978 | T-FS353420    | Air-Oil Separator               |
| R38048978 | T-FS6120      | Air-Oil Separator               |
| R56361863 | T-FSP02450    | Air-Oil Separator               |
| R56501500 | T-FS19920     | Air-Oil Separator               |
| R71100187 | T-FS24220     | Air-Oil Separator               |
| R71359719 | T-FS4620      | Air-Oil Separator               |
| TB1364X   | T-FO32113580  | Oil Filter                      |
| TB1394/1X | T-FO32113680  | Oil Filter                      |
| TB1394/5X | T-FO32113780  | Oil Filter                      |
| W11102    | T-FO3210880   | Oil Filter                      |
| W11102/19 | T-FO3224780   | Oil Filter                      |
| W11102/26 | T-FO32117780  | Oil Filter                      |
| W11102/33 | T-FO32102480  | Oil Filter                      |
| W11102/36 | T-FO3214880   | Oil Filter                      |
| W11102/4  | T-FO3214880   | Oil Filter                      |
| W1140     | T-FO3215480   | Oil Filter                      |
| W1170     | T-FO3214980   | Oil Filter                      |
| W1226     | T-FO3216580   | Oil Filter                      |
| W1237x    | T-FO3218880   | Oil Filter                      |
| W1268/1   | T-FO3216480   | Oil Filter                      |
| W1269     | T-FO3214580   | Oil Filter                      |
| W13120/3  | T-FO3221880   | Oil Filter                      |
| W13145/3  | T-FO3270580   | Oil Filter                      |
| W1374/2   | T-FO3214480   | Oil Filter                      |



# CATALOGUE 2026

21.12.2025

|            |              |                  |
|------------|--------------|------------------|
| W1374/4    | T-FO3211480  | Oil Filter       |
| W610/3     | T-FO32112280 | Oil Filter       |
| W712       | T-FO3222780  | Oil Filter       |
| W712/4     | T-FO531002   | Oil Filter       |
| W719/10    | T-FO32103280 | Oil Filter       |
| W719/11    | T-FO3222180  | Oil Filter       |
| W719/20    | T-FO32105480 | Oil Filter       |
| W719/30    | T-FO3222280  | Oil Filter       |
| W719/35    | T-FO32252280 | Oil Filter       |
| W719/4     | T-FO3222580  | Oil Filter       |
| W719/5     | T-FO3211380  | Oil Filter       |
| W77        | T-FO3219680  | Oil Filter       |
| W910/1     | T-FO3219680  | Oil Filter       |
| W917       | T-FO3222680  | Oil Filter       |
| W920       | T-FO3222680  | Oil Filter       |
| W920/17    | T-FO3222680  | Oil Filter       |
| W920/23    | T-FO3222680  | Oil Filter       |
| W920/46    | T-FO3222680  | Oil Filter       |
| W920/57    | T-FO32108180 | Oil Filter       |
| W930       | T-FO3220680  | Oil Filter       |
| W936/10    | T-FO32109680 | Oil Filter       |
| W940       | T-FO531001   | Oil Filter       |
| W940/15n   | T-FO531001   | Oil Filter       |
| W940/18    | T-FO3211980  | Oil Filter       |
| W940/19    | T-FO32109680 | Oil Filter       |
| W940/2     | T-FO3222480  | Oil Filter       |
| W940/21    | T-FO3223880  | Oil Filter       |
| W940/5     | T-FO3211980  | Oil Filter       |
| W940/51    | T-FO32102380 | Oil Filter       |
| W940/62    | T-FO32100280 | Oil Filter       |
| W950       | T-FO3214680  | Oil Filter       |
| W950/17    | T-FO3222380  | Oil Filter       |
| W950/35    | T-FO32110280 | Oil Filter       |
| W962       | T-FO531005   | Oil Filter       |
| W962/14    | T-FO3210780  | Hydraulic Filter |
| W962/36    | T-FO3213080  | Oil Filter       |
| W962/38    | T-FO531005   | Oil Filter       |
| W962/41    | T-FO32110180 | Oil Filter       |
| W962/44    | T-FO32106380 | Oil Filter       |
| W962/51    | T-FO32106380 | Oil Filter       |
| W962/52    | T-FO32108280 | Oil Filter       |
| W962/6     | T-FO531005   | Oil Filter       |
| WA9140     | T-FO32113380 | Oil Filter       |
| WD10005    | T-FO3213080  | Oil Filter       |
| WD10010    | T-FO3219180  | Oil Filter       |
| WD13009x   | T-FO32110580 | Oil Filter       |
| WD13145    | T-FO3210980  | Oil Filter       |
| WD13145/14 | T-FO32197980 | Oil Filter       |
| WD13145/16 | T-FO32104180 | Oil Filter       |
| WD13145/20 | T-FO32346580 | Oil Filter       |
| WD13145/4  | T-FO32197980 | Oil Filter       |

|           |              |                   |
|-----------|--------------|-------------------|
| WD1374    | T-FO3211480  | Oil Filter        |
| WD1374/4  | T-FO3211480  | Oil Filter        |
| WD1374/5  | T-FO32104780 | Oil Filter        |
| WD1374/6  | T-FO32120180 | Oil Filter        |
| WD724/3   | T-FO3215280  | Oil Filter        |
| WD724/6   | T-FO3215280  | Oil Filter        |
| WD920     | T-FO3215380  | Oil Filter        |
| WD920/5   | T-FO32346280 | Oil Filter        |
| WD920/7   | T-FO32109280 | Oil Filter        |
| WD940     | T-FO3215480  | Oil Filter        |
| WD940/10  | T-FO32107480 | Oil Filter        |
| WD940/14  | T-FO32346380 | Oil Filter        |
| WD940/19  | T-FO3215480  | Oil Filter        |
| WD940/2   | T-FO3222480  | Oil Filter        |
| WD940/25  | T-FO32106280 | Oil Filter        |
| WD950     | T-FO3215580  | Oil Filter        |
| WD950/2   | T-FO3215580  | Oil Filter        |
| WD962     | T-FO3211080  | Oil Filter        |
| WD962/12  | T-FO3215080  | Oil Filter        |
| WD962/14  | T-FO32346480 | Oil Filter        |
| WD962/24  | T-FO32110080 | Oil Filter        |
| WD962/25  | T-FO32104280 | Oil Filter        |
| WD962/26  | T-FO32105580 | Oil Filter        |
| WD962/29  | T-FO32108980 | Oil Filter        |
| WD962/32  | T-FO32112880 | Oil Filter        |
| WD962/33  | T-FO32108080 | Oil Filter        |
| WD962/35  | T-FO32108080 | Oil Filter        |
| WD962/9   | T-FO3220580  | Oil Filter        |
| WH1257    | T-FO3217980  | Oil Filter        |
| WH980/2   | T-FO32106980 | Oil Filter        |
| WH980/3   | T-FO32106780 | Oil Filter        |
| WH980/8   | T-FO3218380  | Oil Filter        |
| WK1175X   | T-19591FS    | Fuel Filter       |
| WK31/2    | T-G2         | Fuel Filter       |
| WK712/2   | T-FF5113     | Fuel Filter       |
| WK842     | T-FF5156     | Fuel Filter       |
| XC1-8393  | T-A87413960  | Air Filter        |
| XH8215    | T-FO32109580 | Oil Filter        |
| XH8215    | T-FO3219280  | Oil Filter        |
| XLE18151  | T-FS454140   | Air-Oil Separator |
| XLE18159  | T-FS452230   | Air-Oil Separator |
| XLE18160  | T-FS31820    | Air-Oil Separator |
| XW1-8090  | T-FO32103580 | Oil Filter        |
| XWD1-8181 | T-FO3217780  | Oil Filter        |